



## MAESTRO M100 SERIES SMARTPACK USER MANUAL VERSION 4

FOR APPLICATION VERSION 2.2  
ON M1002G, M1003G, M1003G485, M100CDMAPLUS, M100CDMA485

WWW.MAESTRO-WIRELESS.COM

EMAIL: SUPPORT@MAESTRO-WIRELESS.COM

TEL: (+852) 2869 0688

FAX: (+852) 2525 4701

ADDRESS: 9/F, 121 KING LAM STREET, CHEUNG SHA WAN, HONG KONG



# Revision history

| Version | Date         | Details  | Originated by  |
|---------|--------------|--|----------------|
| 1       | 13 May 2013  | First Issue  | Samuel Chéreau |
| 2       | 22 Jul 2013  | Add details on M100 3G GPS commands on Chapter 23<br>Correct input command string details in section 21.4<br>Edited pictures for GPIO connections<br>Add details on IOBR, IOBW commands<br>Typo  | Samuel Chéreau |
| 3       | 26 Feb 2014  | Update for 097g<br>Added command to switch from WipSoft and SmartPack<br>Added command to reset all SmartPack settings to default<br>Added debug command for TCP/IP stack  | Samuel Chéreau |
| 4       | 2 March 2016 | Update for version 2.2:<br>Added Chapter 18 for serial to IP mode<br>Fixed IP section (21.4)<br>Edited AUFM and IPBUFF description to clarify its application<br>10 Command string CT service can be used<br>Edited IPPING as it supports URL address<br>Corrected CT description in 22.1<br>SMSAT can accept any ASCII character<br>Edited IPOPT=1 parameter description<br>Added a note for TMODE input voltage<br>Edited IPTCP and IPUDP with <UART> parameter description<br>Edited GP 1 service description<br>Fixed IPPING <echo_time> response<br>Edited AUOPT to add option 4, 5 and 6<br>Clarified GPSSTART default values<br>Edited IPOPT=5 parameter description<br>Edited OTCP/OUUDP note<br>Deprecated "Keep Alive"<br>Added GPS command string example | Samuel Chéreau |

This manual is written without any warranty.

**Maestro Wireless Solutions Ltd.** reserves the right to modify or improve the product and its accessories which can also be withdrawn without prior notice.

Besides, our company stresses the fact that the performance of the product as well as accessories depends not only on the proper conditions of use, but also on the environment around the places of use.

**Maestro Wireless Solutions Ltd.** assumes no liability for damage incurred directly or indirectly from errors, omissions or discrepancies between the modem and the manual.

This software, solution or application is provided on an "as is" basis. No warranty whether expressed or implied is given by **Maestro Wireless Solutions Ltd.** in relation to this software, solution or application. User shall assume the entire risk of using or relying on this software, solution or application.

In no event will **Maestro Wireless Solutions Ltd.** be liable for any loss or damage including without limitation, indirect or consequential loss, damage, or any loss, damage whatsoever arising from loss of data or profit arising out of, or in connection with, the use of this software, application or solution.

Every effort is made to keep the software, application or solution up and running smoothly. However, **Maestro Wireless Solutions Ltd.** takes no responsibility for, and will not be liable for, the software, application or solution being temporarily unavailable due to technical issues beyond our control.

The above terms and conditions are subject to change without prior notice. The present use of this software, application or solution implies the user approves and understands all the above terms and conditions.

# Contents

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>Introduction</b>  | <b>11</b> |
| 1.1      | SmartPack version command . . . . .                        | 12        |
| 1.2      | Erasing the SmartPack application . . . . .                | 12        |
| 1.3      | Switch between WipSoft and SmartPack . . . . .             | 13        |
| 1.4      | Reset SmartPack settings to default value . . . . .        | 13        |
| 1.5      | Debug command for IP communication . . . . .               | 14        |
| 1.6      | Change serial port configuration from the USB . . . . .    | 14        |
| <b>2</b> | <b>Cellular and TCP/UDP parameters setup</b>               | <b>17</b> |
| 2.1      | CellularNetwork Parameters . . . . .                       | 17        |
| 2.1.1    | Cellular network parameters . . . . .                      | 17        |
| 2.1.2    | Activating cellular connection . . . . .                   | 18        |
| 2.2      | TCP/UDP Parameters Setup . . . . .                         | 20        |
| 2.2.1    | TCP socket parameters . . . . .                            | 20        |
| 2.2.2    | UDP socket parameters . . . . .                            | 21        |
| 2.2.3    | Socket buffer parameters . . . . .                         | 22        |
| 2.3      | Extra TCP/UDP Parameters Setup . . . . .                   | 23        |
| <b>3</b> | <b>Automatic and self-recovery TCP/UDP connection</b>      | <b>25</b> |
| 3.1      | Flow diagram of Auto TCP/UDP connection function . . . . . | 26        |
| 3.2      | AT commands for Auto TCP/UDP connection . . . . .          | 27        |
| 3.2.1    | Automatic TCP connection . . . . .                         | 27        |
| 3.2.2    | Automatic UDP connection . . . . .                         | 28        |
| 3.2.3    | Buffering time . . . . .                                   | 29        |
| 3.2.4    | Optional parameters . . . . .                              | 30        |
| <b>4</b> | <b>AT command driven TCP/UDP connection</b>                | <b>33</b> |
| 4.1      | Closing connection command . . . . .                       | 33        |
| 4.2      | Opening TCP connection . . . . .                           | 34        |
| 4.3      | Opening UDP connection . . . . .                           | 34        |
| <b>5</b> | <b>Ping service</b>  | <b>37</b> |
| 5.1      | Setting up and executing ping command . . . . .            | 37        |

|           |   |           |
|-----------|---|-----------|
| <b>6</b>  | <b>Dynamic DNS</b>  | <b>39</b> |
| 6.1       | Description of operation . . . . .                            | 39        |
| 6.2       | Dynamic DNS server . . . . .                                  | 40        |
| 6.3       | Dynamic DNS account . . . . .                                 | 40        |
| 6.4       | Updating Dynamic DNS information . . . . .                    | 41        |
| <b>7</b>  | <b>TCP terminal</b>   | <b>43</b> |
| 7.1       | Description of the Operation . . . . .                        | 43        |
| 7.2       | TCP Remote Terminal . . . . .                                 | 44        |
| <b>8</b>  | <b>E-mail sending (SMTP) service</b>                          | <b>45</b> |
| 8.1       | Description of the Operation . . . . .                        | 45        |
| 8.2       | SMTP server . . . . .   | 45        |
| 8.3       | Email address . . . . .                                       | 46        |
| 8.4       | Email subject . . . . .                                       | 47        |
| 8.5       | Email body . . . . .  | 48        |
| 8.6       | Sending an email . . . . .                                    | 49        |
| <b>9</b>  | <b>TCP Socket Communication Service</b>                       | <b>51</b> |
| 9.1       | Description of the Operation . . . . .                        | 51        |
| 9.2       | TCP socket . . . . .  | 51        |
| 9.3       | TCP socket message . . . . .                                  | 52        |
| 9.4       | Sending a TCP socket message . . . . .                        | 53        |
| <b>10</b> | <b>Remote AT command by SMS</b>                               | <b>55</b> |
| 10.1      | Description of the operation . . . . .                        | 55        |
| 10.2      | Remote AT command by SMS . . . . .                            | 56        |
| 10.3      | Limitation and caution when using remote AT command . . . . . | 56        |
| <b>11</b> | <b>Input/Output port control</b>                              | <b>57</b> |
| 11.1      | Relationship between input and output of I/O ports . . . . .  | 57        |
| 11.2      | I/O control AT command . . . . .                              | 58        |
| 11.2.1    | Read digital input status . . . . .                           | 58        |
| 11.2.2    | Set digital output status . . . . .                           | 58        |
| 11.2.3    | Read digital output status . . . . .                          | 59        |
| <b>12</b> | <b>Input/Output triggered AT command</b>                      | <b>61</b> |
| 12.1      | Description of the operation . . . . .                        | 61        |

|   |           |
|---|-----------|
| 12.2 Activating I/O triggered AT command . . . . .            | 62        |
| <b>13 Analog Input triggered AT command</b>                   | <b>65</b> |
| 13.1 Description of the operation . . . . .                   | 65        |
| 13.2 Activating analog triggered AT command . . . . .         | 66        |
| 13.3 Editing high and low analog levels . . . . .             | 67        |
| <b>14 Call screening</b>                                      | <b>69</b> |
| 14.1 Enabling call screening . . . . .                        | 69        |
| 14.2 Authorized phone number list . . . . .                   | 70        |
| 14.3 Reading authorized phone number list . . . . .           | 70        |
| 14.4 Erasing authorized phone number list . . . . .           | 71        |
| <b>15 Modem status check and monitoring</b>                   | <b>73</b> |
| 15.1 Modem status check and monitoring . . . . .              | 73        |
| 15.2 Operation of modem status check and monitoring . . . . . | 74        |
| <b>16 Automatic PIN entry</b>                                 | <b>77</b> |
| 16.1 Automatic PIN entry . . . . .                            | 77        |
| <b>17 Remote application update</b>                           | <b>79</b> |
| 17.1 FTP server . . . . .                                     | 79        |
| 17.2 Starting remote application download . . . . .           | 80        |
| 17.3 Installing new application . . . . .                     | 81        |
| 17.4 Notes and cautions to be taken . . . . .                 | 82        |
| <b>18 Serial to IP mode and Modbus configuration</b>          | <b>83</b> |
| 18.1 Serial to IP mode selection . . . . .                    | 83        |
| 18.2 Modbus serial configuration . . . . .                    | 83        |
| 18.3 Examples . . . . .                                       | 84        |
| <b>19 Command string - Introduction</b>                       | <b>85</b> |
| <b>20 Command string - How to use ?</b>                       | <b>87</b> |
| 20.1 Command string format . . . . .                          | 87        |
| 20.1.1 Service type . . . . .                                 | 87        |
| 20.1.2 Service id . . . . .                                   | 87        |
| 20.1.3 Operation type and Operation argument . . . . .        | 87        |
| 20.2 Concatenating Command String . . . . .                   | 87        |

|   |            |
|---|------------|
| 20.3 Executing a Command String . . . . .   | 88         |
| 20.4 Editing a stored Command String . . . . .                                      | 88         |
| <b>21 Command string - Services - Syntax and explanation</b>                        | <b>91</b>  |
| 21.1 Alarm Service . . . . .  | 91         |
| 21.2 Counter Service . . . . .  | 92         |
| 21.3 Countdown Timer Service . . . . .  | 93         |
| 21.4 Input Port Service . . . . .   | 93         |
| 21.5 Output Port Service . . . . .  | 95         |
| 21.6 SMS Service . . . . .  | 95         |
| 21.7 Email Sending Service . . . . .  | 96         |
| 21.8 Device Power Control Service . . . . .   | 98         |
| 21.9 Analog input Service . . . . .   | 98         |
| 21.10 Socket Communication Service . . . . .  | 100        |
| <b>22 Command string - Reading status of one services</b>                           | <b>103</b> |
| 22.1 Command for reading current information of Services . . . . .                  | 103        |
| 22.1.1 Reading Alarm Service . . . . .  | 103        |
| 22.1.2 Reading Counter Service . . . . .  | 104        |
| 22.1.3 Reading Countdown Timer Service . . . . .                                    | 104        |
| 22.1.4 Reading Input Pin Service . . . . .  | 104        |
| 22.1.5 Reading Device Power Control Service . . . . .                               | 105        |
| 22.1.6 Reading Email Sending Service . . . . .                                      | 105        |
| 22.1.7 Reading Analog Input Service . . . . .                                       | 105        |
| 22.1.8 Reading Output Port Service . . . . .  | 105        |
| <b>23 GPS on the M100 3G XT</b>   | <b>107</b> |
| 23.1 Controlling GPS . . . . .  | 107        |
| 23.2 GPS Information unsolicited messages . . . . .                                 | 111        |
| 23.3 Notes on AGPS . . . . .  | 112        |
| 23.4 Command string GPS service . . . . .   | 113        |
| 23.4.1 Socket Communication Service Command String Syntax and explanation . . . . . | 113        |
| 23.4.2 Reading GPS service status . . . . .   | 113        |
| 23.4.3 GPS info for EM, SC and SM service . . . . .                                 | 114        |
| <b>24 Questions and answers</b>   | <b>115</b> |
| <b>25 Example of modem software setup and operation</b>                             | <b>117</b> |

|  |            |
|--|------------|
| <b>26 Command string - Quick reference</b> | <b>123</b> |
| <b>27 Known issues</b>                     | <b>125</b> |
| <b>28 SmartPack change log</b>             | <b>127</b> |
| <b>29 Related documents</b>                | <b>129</b> |
| 29.1 Related documents . . . . .           | 129        |
| 29.2 Related software . . . . .            | 129        |



# Chapter 1

## Introduction

Maestro SmartPack is a set of software solutions for Maestro 100 modem. Bundled functions added to increase the utility range of various industrial and automated applications, such as:

- Automatic and self-recovery TCP/UDP socket connection
- AT command driven TCP/UDP socket connection
- Ping Service
- Dynamic DNS
- Input/Output and Analog<sup>1</sup> triggered AT command
- Email sending (SMTP)
- Remote AT command through SMS and TCP Terminal
- Call screening
- Modem status check and monitoring
- Remote program updating
- "Command String" programming scripts
- Socket data sending
- GPS control commands<sup>2</sup>

User can configure and use the above features by following this document.

## Target Users

This document is designed for system integrators or experienced hardware installers who are comfortable with all aspects of IP based networking and have an understanding of serial based technologies such as dial-up modems, AT commands and legacy data collection devices.

## General behavior

Otherwise noted, each following command (AT+COMMAND) detailed in the user manual will reply as below:

**OK** Valid parameter string. Command is acknowledge.

**ERROR** Otherwise.

**AT+COMMAND?** Display the status of the current configuration.

**AT+COMMAND=?** Display the format and possible values of the command.

<sup>1</sup>Analog input only available on M1002G

<sup>2</sup>GPS only available on M1003GXT

## 1.1 SmartPack version command

### AT+VAFV

Display the revision details of the SmartPack installed on Maestro modem

**Syntax:** AT+VAFV

**Response:** <model>\_SMARTPACK\_<revision>\_<module>\_<firmware>\_<date>

#### Defined Values:

<model> is the modem type, either:

M1002G for the cellular/EDGE version.

M1003G for the WCDMA version with gpsOne engine and USB connection. Applies also to the RS-485 variant.

M100CDMAPLUS for the Verizon CDMA version with gpsOne engine and USB connection. Applies also to the RS-485 variant.

<revision> is the version number of the SmartPack installed.

<module> is the Sierra Wireless module name.

<firmware> is the Sierra Wireless firmware required for this version of the SmartPack.

<date> is the build date of this version of the SmartPack.

#### Example:

| Command | Response  |
|---------|---|
| AT+VAFV | M1002G_SMARTPACK_097e_SL6087_R746_250413<br>OK                      |
| AT+VAFV | ERROR<br>Note: SmartPack has not been properly loaded or installed. |

#### Note:

- To verify the Sierra Wireless firmware version loaded in the modem please enter the command AT!3, for more details on all the common AT commands available, please look in the Chapter 29.
- Be sure when updating the SmartPack that the required Sierra Wireless firmware is the correct one, otherwise the SmartPack application may crash or have wrong behavior.

## 1.2 Erasing the SmartPack application

If you need to erase the SmartPack application please follow the commands listed in table 1.1.

| Command    | Response | Function                               |
|------------|----------|--|
| AT+WOPEN=0 | OK       | Stop the application, modem will reset |
| AT+WOPEN=3 | OK       | Erase configuration memory             |
| AT+WOPEN=4 | OK       | Erase flash memory, modem will reset   |
| AT&F       | OK       | Factory default                        |

Table 1.1: Erase Application

## 1.3 Switch between WipSoft and SmartPack

### AT+SPMODE

Enable user to switch to standard Sierra Wireless WipSoft if the SmartPack commands are not required.

**Syntax:** AT+SPMODE=<mode>

**Response:** OK

#### Defined Values:

<mode> defines the application which runs on top of OpenAT:

- 0 SmartPack will run normally (Default value)
- 1 WipSoft will run and SmartPack commands are deactivated.

#### Example:

| Command     | Response   |
|-------------|--|
| AT+SPMODE?  | +SPMODE: 0<br>OK   |
| AT+SPMODE=1 | OK<br>Note: WipSoft is activated and unit will reboot once   |
| AT+SPMODE=0 | OK<br>Note: SmartPack is activated and unit will reboot once |

#### Note:

- Command cannot be send remotely.
- The SmartPack always change the SMS format to use Text mode (AT+CMGF=1).

## 1.4 Reset SmartPack settings to default value

### AT+SPRESET

Enable user to revert all SmartPack settings to default value in one command.

**Syntax:** AT+SPRESET

**Response:** OK

#### Example:

| Command    | Response   |
|------------|--|
| AT+SPRESET | OK<br>Note: All SmartPack settings are reverted back to default and unit will reboot once. |

#### Note:

- All core firmware settings will not be modified. I.e. baudrate (+IPR) or flow control of serial port (+IFC) won't be changed.
- Command cannot be send remotely.
- It is recommended to use the procedure detailed in table 1.1 on the facing page as it will clear every flash parameters properly. As of V2.2 +SPRESET is known to leave some parameters uncleared.

## 1.5 Debug command for IP communication

### AT+IPDEBUG

Configure embedded TCP/IP stack debug message to be sent out or not

**Syntax:** AT+IPDEBUG=<port>

**Response:** OK

#### Defined Values:

<port> defines the output port of debug message:

|   |  |
|---|--|
| 0 | disable debug message (default),         |
| 1 | debug message on main serial port,       |
| 2 | (reserved),                              |
| 3 | debug message on USB COM port (M100 3G). |

#### Example:

| Command      | Response  |
|--------------|---|
| AT+IPDEBUG=1 | OK<br>Note: Enable the debug message on main serial port. |
| AT+IPDEBUG=3 | OK<br>Note: Enable the debug message on USB COM port      |
| AT+IPDEBUG=0 | OK<br>Note: Disable the debug message                     |

#### Note:

- After changing this setting, unit should be restarted prior to seeing the debug message.
- Debug message will only be sent when the port is in command mode.
- Command cannot be send remotely.

## 1.6 Change serial port configuration from the USB

### AT+SERIAL

Enable user to change the serial port configuration without the need to unplug the serial device.

**Syntax:** AT+SERIAL=<baud>,<char\_framing>,<flow\_control>

**Response:** OK

#### Defined Values:

<baud> main serial port baudrate setting: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200, 600, 300

<char\_framing> "8N1", "8O1", "8E1", "8N2", "7N1", "7O1", "7E1", "7N2"

#### Example:

| Command              | Response  |
|----------------------|---|
| AT+SERIAL?           | +SERIAL: 115200,"8N1"<br>OKWOPEN<br>Note: default settings.   |
| AT+SERIAL=?          | +SERIAL:<br>(300,600,1200,2400,4800,9600,19200,38400,57600,115200),<br>("8N1","8O1","8E1","8N2","7N1","7O1","7E1","7N2")<br>OK<br>Note: |
| AT+SERIAL=9600,"8E1" | OK<br>Note: set the new settings for the serial port  |

**Note:**

- Flow control is by default set to hardware flow control this command doesn't change it.
- This command won't be set when the SmartPack is in SPMODE=0, customer will have to set his serial port properly in this case.



# Chapter 2

## Cellular and TCP/UDP parameters setup

Describes how to setup cellular and TCP/UDP parameters to use the Automatic and AT command driven TCP/UDP connection, PING service, Dynamic DNS support.

### 2.1 CellularNetwork Parameters

Following parameters are needed for cellular connection:

- Access point name (APN)
- User name
- Password

Those parameters have to be set using the AT+IPGPRS command. Please contact your network operator if you need any assistance with those parameters.

#### 2.1.1 Cellular network parameters

##### AT+IPGPRS

To setup cellular network parameters for the TCP/UDP connection.

**Syntax:** AT+IPGPRS=<Cid>,<APN>,<UN>,<PW>

**Response:** +IPGPRS: <Cid>,<APN>,<UN>,<PW>

##### Defined Values:

- <Cid> PDP context identifier. To use with TCP/UDP connection feature this value must be set to 1.
- <APN> access point name of the cellular network. Max 100 characters.
- <UN> user name to access the cellular service. Max 50 characters.
- <PW> password used to access the cellular service. Max 50 characters.

##### Example:

| Command                | Response  |
|------------------------|---|
| AT+IPGPRS?             | +IPGPRS: 1,"", "", ""<br>OK                               |
| AT+IPGPRS=1            | OK<br>Note: set Cid value to 1.                           |
| AT+IPGPRS=1,"internet" | OK<br>Note: set the PDP value to 1 and APN to "internet". |
| AT+IPGPRS=?            | +IPGPRS: (1-4),(100),(50),(50)<br>OK                      |

**Note:**

- +IPGPRS command is not used for M100CDMAplus modem, but kept as is for specific network providers. It can be defaulted to +IPGPRS: 1,"Verizon", "", "" for Verizon Wireless version.

## 2.1.2 Activating cellular connection

### AT+CGATT

Standard AT command to attach or detach to cellular network. For more details please refer to the AT command guide.

**Syntax:** AT+CGATT=<state>

**Response:** +CGATT: <state>

**Defined Values:**

<state>

- 0 detached from cellular.
- 1 attached to cellular.
- 2 not supported on M100 platform. Combined detach (GPRS and GSM detach in the same network request).

**Example:**

| Command    | Response                                       |
|------------|--|
| AT+CGATT?  | +CGATT: 0<br>OK                                |
| AT+CGATT=1 | OK<br>Note: connection attached to cellular.   |
| AT+CGATT=0 | OK<br>Note: connection detached from cellular. |
| AT+CGATT=? | +CGATT: (0-2)<br>OK                            |

**Note:** Before connecting to cellular by this command make sure you have finished the following first:

1. Entered APN settings by AT+IPGPRS command refer to 2.1.1.
2. After modem power up, wait about 20 seconds before initiating a cellular connection.

### AT+IPCONNECT

To activate or deactivate cellular connection. Once connection is started you can perform TCP/UDP connection, IPPING and other features of the SmartPack.

**Syntax:** AT+IPCONNECT=<Bearer>,<Connect>

**Response:** +IPCONNECT: <Bearer>,<Connect>

**Defined Values:**

<Bearer>

- 0 using GSM Bearer (**Note: Please do NOT use this setting**).

1 using IP Bearer.  
<Connect>  
0 to stop connection.  
1 to start connection.

**Example:**

| Command          | Response  |
|------------------|---|
| AT+IPCONNECT=1,1 | OK<br>Note: Activating IP connection success.       |
| AT+IPCONNECT=1,1 | +CME ERROR: 3<br>Note: Operation not allowed.       |
| AT+IPCONNECT=1,1 | +CME ERROR: 149<br>Note: PDP authentication failure |
| AT+IPCONNECT=1,0 | OK<br>Note: Deactivating IP connection success.     |
| AT+IPCONNECT?    | +IPCONNECT: 1,0<br>OK                               |
| AT+IPCONNECT=?   | +IPCONNECT: (0-1),(0-1)<br>OK                       |

**Note:**

- Before connecting to IP make sure to:
  - Enter APN settings by AT+IPGPRS command detailed in Section 2.1.1 on page 17.
  - It is suggested, after modem power up, to wait for about 20 seconds before initiating a IP connection.
- When reading +IPCONNECT, the command may answer +IPCONNECT: 1,3, this means the modem is still trying to connect. Please wait a few seconds and check again.

## 2.2 TCP/UDP Parameters Setup

The following commands need to be set to use automatic or AT command driven TCP/UDP connection:

- AT+IPTCP
- AT+IPUDP
- AT+IPBUFF

### 2.2.1 TCP socket parameters

**AT+IPTCP**

To specify TCP socket parameters to be used by automatic or AT command driven TCP connection, detailed in the Chapter 3.

**Syntax:** AT+IPTCP=<port>,<mode>,<address>,<TCPTxDelay>,<UART>

**Response:** +IPTCP: <port>,<mode>,<address>,<TCPTxDelay>,<UART>

**Defined Values:**

- <port> port number to be used for the TCP socket connection. Default value is 0. Valid range is 0 to 65535.
- <mode> mode of TCP operation. Default value is "S".

- "S" Server (Listening) mode. Maestro modem will open a listening TCP connection socket on the specified <port>. TCP connection will be active upon getting socket connection request from an allowed remote TCP peer specified in <address>.
- "C" Client (Caller) mode. Maestro modem will request a TCP connection to the server TCP socket with the specified <address> and <port>.

<address> IP address of the TCP socket. Default value is empty. Value can be erased by entering 0. Legal values are 32-bit in dotted-decimal notation (i.e. xxx.xxx.xxx.xxx) or alphanumeric ASCII URL string up to 120 characters (only if DNS is available on the cellular network).

Note: In "Server" (Listening) mode the modem will only accept TCP connection requested with the IP address mask specified in the <address> field. If set to "255.255.255.255" the modem will accept ANY request.

<TCPTxDelay> delay introduced before sending a TCP frame that has not been entirely filled with user data. Default value is 0.

- 0 TCP frame will be sent as soon as possible after the reception of a single character value from the host.
- 1 a delay will be introduced before the sending of a TCP frame.

<UART> define the UART where the socket will applies

- 0 TCP socket settings for the main Serial port, default value.
- 1 TCP socket settings for the USB COM port.

**Example:**

| Command                             | Response  |
|-------------------------------------|---|
| AT+IPTCP?                           | +IPTCP: 0,"S", "",0,0<br>OK   |
| AT+IPTCP=23                         | OK<br>Note: set the TCP port to 23.   |
| AT+IPTCP=23,"C","202.144.111.222",0 | OK<br>Note: set the modem to connect as TCP socket Client (caller) mode to target address "202.144.111.222" on port 23.         |
| AT+IPTCP=23,"S","255.255.255.255",0 | OK<br>Note: set the modem to wait for TCP socket connection request (Server mode) with any calling IP address allowed, port 23. |
| AT+IPTCP=?                          | +IPTCP: (0-65535),("C","S"),(120),(0-1)<br>OK   |

## 2.2.2 UDP socket parameters

### AT+IPUDP

To specify UDP socket parameters to be used by automatic or AT command driven UDP connection, detailed in the Chapter 3.

**Syntax:** AT+IPUDP=<port>,<mode>,<address>,<UDPTxDelay>,<UART>

**Response:** +IPUDP: <port>,<mode>,<address>,<UDPTxDelay>,<UART>

**Defined Values:**

- <port> port number to be used for the UDP socket connection. Default value is 0. Valid range is 0 to 65535.
- <mode> mode of UDP operation. Default value is "S".

- "S" Server (Listening) mode. Maestro modem will open a listening UDP connection socket on the specified <port>. UDP connection will be active upon getting socket connection request from an allowed remote UDP peer specified in <address>.
- "C" Client (Caller) mode. Maestro modem will request a UDP connection to the server UDP socket with the specified <address> and <port>.

<address> IP address of the UDP socket. Default value is empty. Legal values are 32-bit in dotted-decimal notation (i.e. xxx.xxx.xxx.xxx) or alphanumeric ASCII URL string up to 120 characters (only if DNS is available on the cellular network).

Note: In "Server" (Listening) mode the modem will only accept UDP connection requested with the IP address mask specified in the <address> field. If set to "255.255.255.255" the modem will accept ANY request.

<UDPTxDelay> delay introduced before sending a UDP frame that has not been entirely filled with user data. Default value is 0.

- 0 UDP frame will be sent as soon as possible after the reception of a single character value from the host.
- 1 a delay will be introduced before the sending of a UDP frame.

<UART> define the UART where the socket will applies

- 0 UDP socket settings for the main Serial port, default value.
- 1 UDP socket settings for the USB COM port.

**Example:**

| Command                             | Response  |
|-------------------------------------|---|
| AT+IPUDP?                           | +IPUDP: 0,"S","",0<br>OK  |
| AT+IPUDP=23                         | OK<br>Note: set the UDP port to 23.   |
| AT+IPUDP=23,"C","202.144.111.222",0 | OK<br>Note: set the modem to connect UDP socket Client (Caller) mode to target address 202.144.111.222 on port 23.              |
| AT+IPUDP=23,"S","255.255.255.255",0 | OK<br>Note: set the modem to wait for UDP socket connection request (Server mode) with any calling IP address allowed, port 23. |
| AT+IPUDP=?                          | +IPUDP: (0-65535),("C","S"),(120),(0-1)<br>OK   |

**2.2.3 Socket buffer parameters**

**AT+IPBUFF**

To specify the number of bytes of payload data, from remote peer, buffered inside the modem when using automatic or AT command driven TCP/UDP connection.

- If the quantity of buffered data reaches this value, the whole buffered data will be sent out to the serial port.
- If the data from remote is large enough at one time, only a multiple of this value will be sent out to the serial port remaining data will be kept inside buffer.

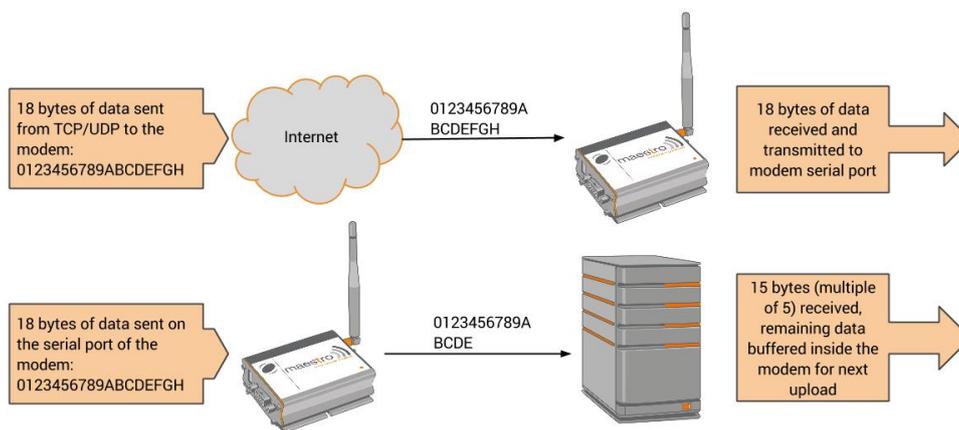


Figure 2.2.1: "AT+IPBUFF=15" example

**Syntax:** AT+IPBUFF=<buff>

**Response:** +IPBUFF: <buff>

**Defined Values:**

<buff> the number of bytes of data to be buffered. Default value is 0 (i.e. no buffering). Valid range is 0 to 100.

**Example:**

| Command     | Response                           |
|-------------|------------------------------------|
| AT+IPBUFF=? | +IPBUFF: (0-100)<br>OK             |
| AT+IPBUFF?  | +IPBUFF: 0<br>OK                   |
| AT+IPBUFF=5 | OK<br>Note: Set IPBUFF value to 5. |

**Note:**

- If the TCP or UDP socket connection is broken, buffered data will be lost.
- Applies only when using automatic or AT command driven TCP/UDP connection.

## 2.3 Extra TCP/UDP Parameters Setup

Set additional parameters for the TCP/UDP connection, including "keep alive" packet, maximum packet size, TTL and periodic ping action to monitor the Internet connection status.

**AT+IPOPT**

**Syntax:** AT+IPOPT=<CMDType>,<parameter>[,<action>,<con\_str>]

**Response:** +IPOPT: <CMDType>,<parameter>[,<action>,<con\_str>]

**Defined Values:**

<CMDType>

- 1 **DEPRECATED as of R7.52 firmware.** "keep alive" packet feature; an empty "keep alive" packet will be sent out from the modem to avoid socket being closed because of cellular idle timeout. <parameter> is used to define the frequency in seconds of the "keep alive" packet. The value can be set from 1 to 65535, 0 to disable the feature. Default is 0, feature disabled.
- 2 <parameter> is the maximum size of the outgoing packet in byte. The size can be set from 1 to 1500, 0 to disable the feature. Default value is 1500.
- 3 <parameter> is the Time To Live (TTL) value of the socket connection in seconds. The value can be set from 1 to 255, or 0 to disable the feature. Default value is 128.
- 4 <parameter> is the period in second of calling +IPPING feature, after cellular connected. The value can be set from 1 to 65535, or 0 to disable the feature. Default is 0, feature disabled. If +IPPING gives ERROR, modem will trigger the choice set by the <action> parameter.
- 5 <parameter> is the data to be sent on first connection. Data is in hexadecimal format, maximum length is 120 characters. Default is 0.

<action> To specify the action will be taken if a set of ping action fail:

- 0 do nothing (default).
- 1 disconnect IP (+IPCONNECT=1,0).
- 2 reset Maestro modem.

<con\_str> To specify a set of data to be sent over the TCP/UDP channel to the remote peer when first connection is established. Data is entered in Hexadecimal format (01 to FF). Maximum 60 bytes of data can be set.

**Example:**

| Command                 | Response  |
|-------------------------|---|
| AT+ILOPT?               | +ILOPT: 1,0<br>+ILOPT: 2,1500<br>+ILOPT: 3,128<br>+ILOPT: 4,0,0<br>+ILOPT: 5,""<br>OK |
| AT+ILOPT=1,1            | OK<br>Note: enable the keep alive packet feature at 1s rate.                          |
| AT+ILOPT=1,300          | OK<br>Note: enable the keep alive packet feature at 5min rate.                        |
| AT+ILOPT=2,512          | OK<br>Note: set the size of maximum packet that to be sent to 512 bytes.              |
| AT+ILOPT=3,128          | OK<br>Note: set TTL to 128.   |
| AT+ILOPT=4,60,1         | OK<br>Note: enable ping action every 60 seconds, if ping fail then disconnect IP.     |
| AT+ILOPT=5,"48454C4C4F" | OK<br>Note: to send "HELLO" to remote peer when connection is established             |
| AT+ILOPT=?              | +ILOPT: (1-4),(0-65535)[,(0-2)]<br>OK   |

**Note:**

- +ILOPT options are active only for AUTOTCP/UDP connections. Those don't apply to +OTCP or +OUDP mode.
- Option 5 of +ILOPT, if used along with option 4 of +AUOPT, will be sent after the +AUOPT prefix.

## Chapter 3

# Automatic and self-recovery TCP/UDP connection

The Auto TCP/UDP connection feature is defined for accessing serial devices over the Internet. Modem can be configured to connect, after power up, to a remote TCP/UDP socket (Client mode) or to wait for the TCP/UDP socket connection request from remote peer (Server mode).

If the socket connection is unsuccessful or disconnected it will repeat the connection request and back to waiting stage. This make remote peer can access serial device connected to Maestro modem.

The socket can be set to be disconnected after a period of unconditional connection or zero data traffic.

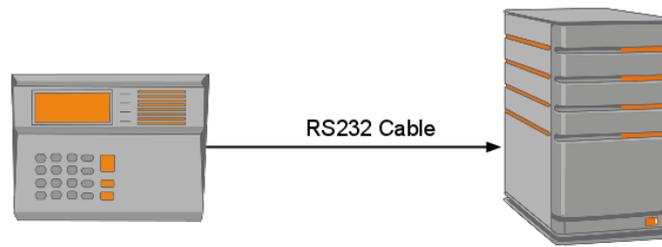


Figure 3.0.1: Direct Serial Connection


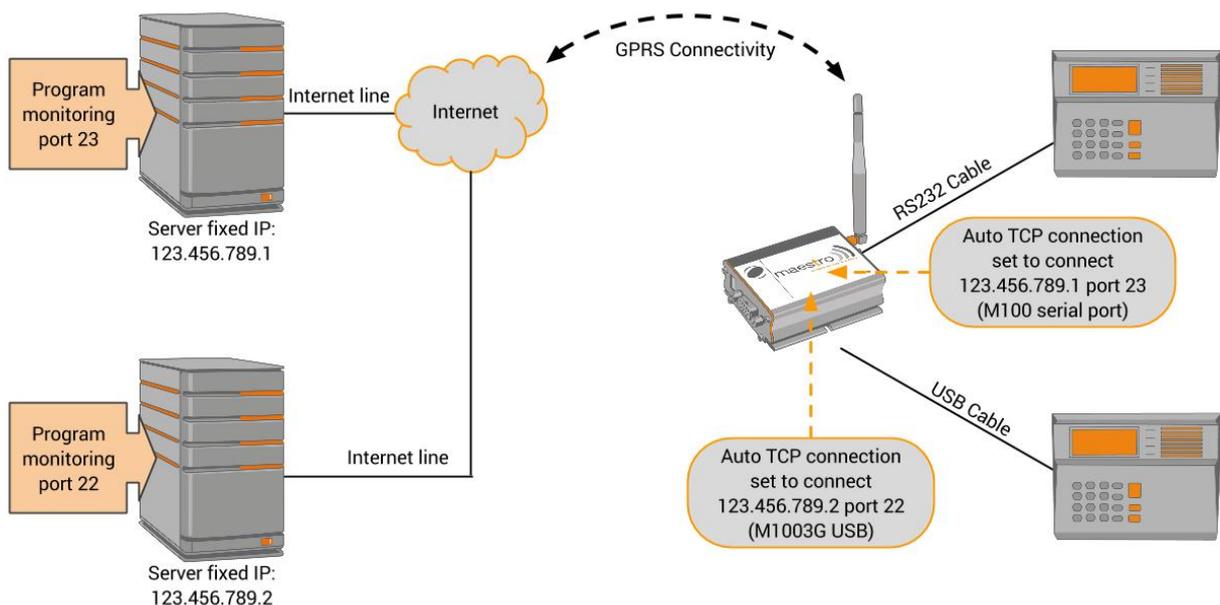


Figure 3.0.2: Example of Automatic Connection(s) over cellular

### 3.1 Flow diagram of Auto TCP/UDP connection function

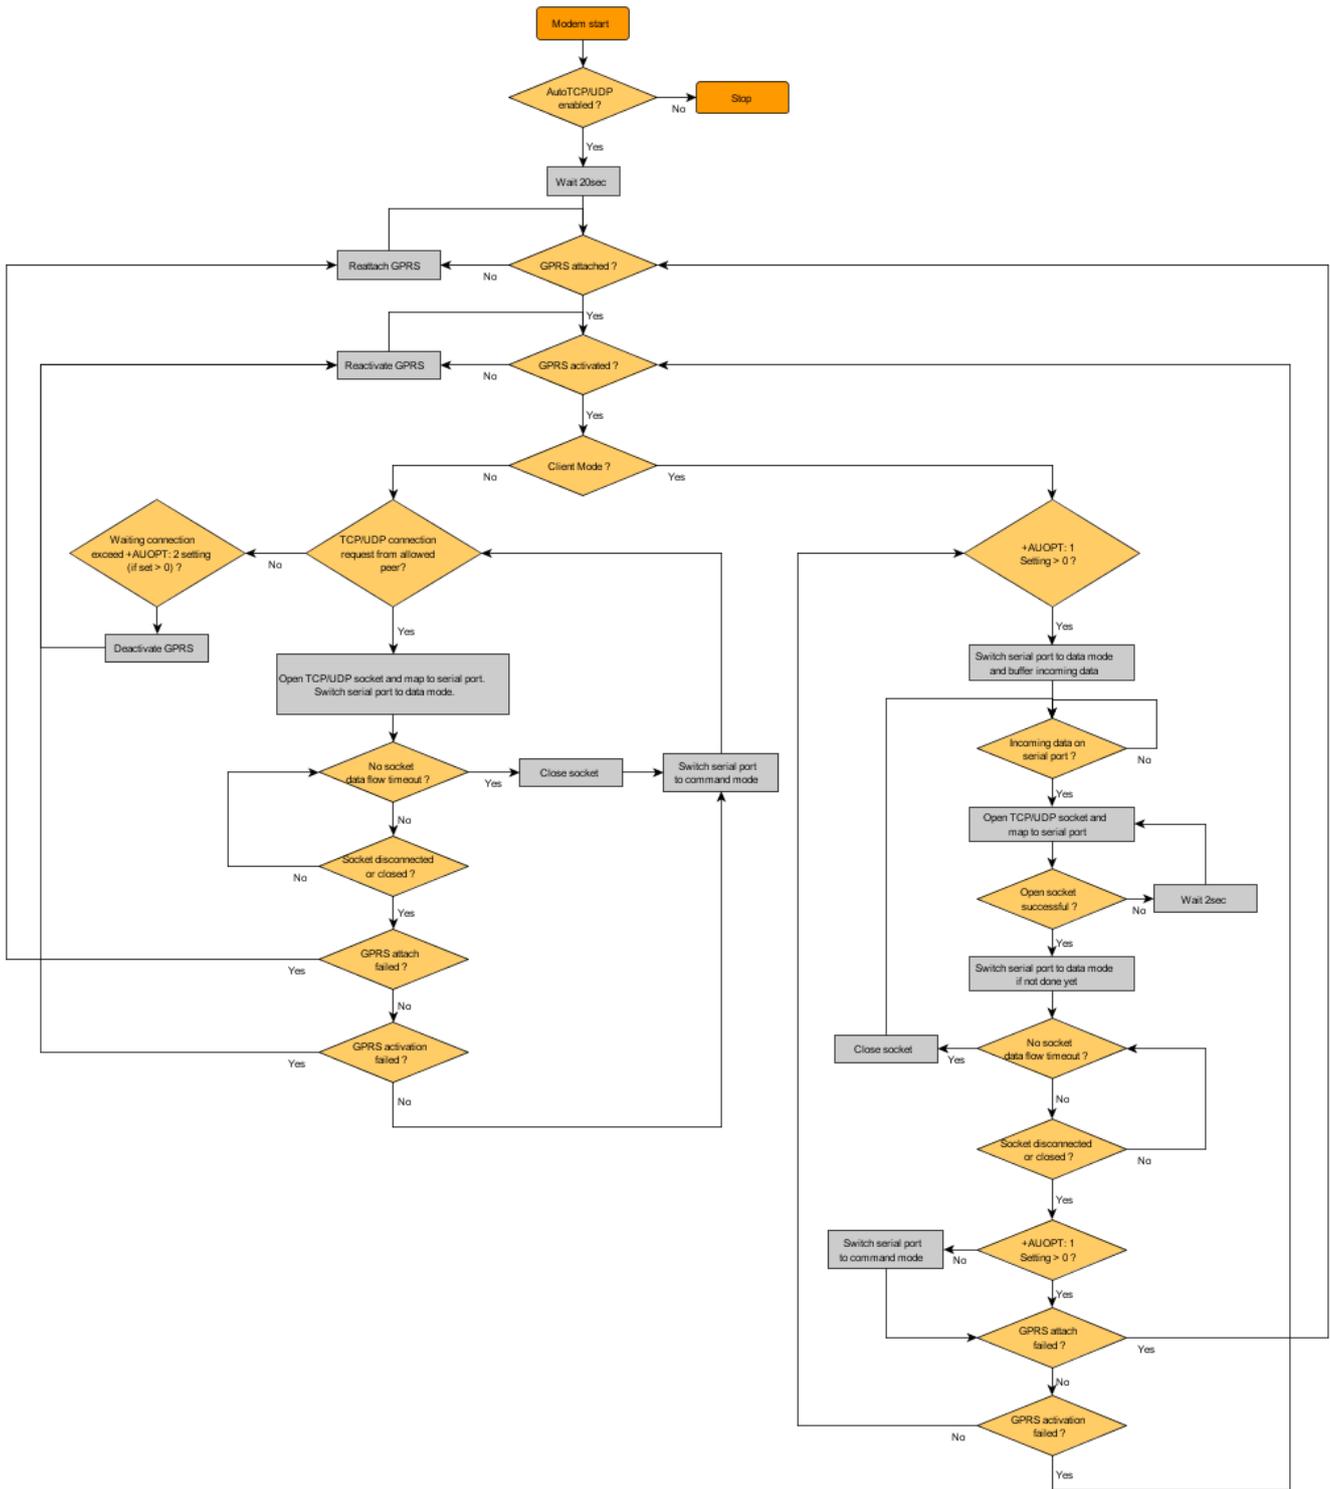

## 3.2 AT commands for Auto TCP/UDP connection

### 3.2.1 Automatic TCP connection

#### AT+AUTOTCP

This command controls the modem to start TCP socket connection automatically.

Two socket connections can be established at the same time, mapping to the main Serial port or USB COM port in case of the M1003G.

Before using AT+AUTOTCP TCP and cellular settings MUST be setup properly using AT+IPTCP and AT+IPGPRS command respectively. See section 2.2.1 and 2.1.1 for more details.

**Syntax:** AT+AUTOTCP=<mode>

**Response:** +AUTOTCP: <mode>

#### Defined Values:

<mode>

- |   |  |
|---|--|
| 0 | disable auto TCP (for main Sieral port and USB COM port).                            |
| 1 | enable auto TCP mapped to main Serial port, disable auto TCP mapped to USB COM port. |
| 2 | enable auto TCP mapped to USB COM port, disable auto TCP mapped to main Serial port. |
| 3 | enable auto TCP on both main and USB COM port.                                       |

#### Example:

| Command      | Response                      |
|--------------|-------------------------------|
| AT+AUTOTCP=0 | OK<br>Note : disable AutoTCP. |
| AT+AUTOTCP=1 | OK<br>Note: enable AutoTCP.   |
| AT+AUTOTCP?  | +AUTOTCP: 1<br>OK             |
| AT+AUTOTCP=? | +AUTOTCP: (0-3)<br>OK         |

#### Note:

- AUTOTCP connection is exclusive to other TCP/UDP feature. See chapter 24.
- Before enabling AUTOTCP, the cellular settings MUST be properly configure by AT+IPGPRS command and TCP settings by AT+IPTCP command, see section 2.2.1 and 2.1.1 for more details.
- If AUTOTCP is enabled, cellular reconnection will happen automatically if the modem loses cellular IP address.
- USB COM port is not available on the 2G model.
- ONLY cellular PDP context # 1 will be used. Please make sure to setup +IPGPRS settings with <Cid>=1 .
- Once AUTOTCP is enabled, it will start the TCP socket connection automatically after 20 seconds.
- Once the TCP connection is established successfully, the serial port will go to data mode, all data entered to the serial port will be sent to remote TCP peer. No more AT commands will be accepted.
- In TCP connected data mode, the DSR and DCD signals of the serial port will go to high.

- If TCP connection is broken the modem will try to reconnect automatically. During re-connection period serial port will go back to command mode, and DSR/DCD signal back to low.
- The setting will be saved, and after power off, the AUTOTCP will be restarted with the 20 seconds delay after power up.
- To stop auto TCP connection, you need to enter the command AT+AUTOTCP=0 either
  1. within 20 seconds after power up,
  2. during reconnection (serial port back to command mode),
  3. or by SMS (see chapter 10)
- During AUTOTCP operation reset will happen in following cases:
  1. If no GPRS connection successful for 2 minutes.
  2. If failure to switch UART to Data mode.
  3. If undefined condition occurs in connection errors/callback handlers.

### 3.2.2 Automatic UDP connection

#### AT+AUTOUDP

This command controls the modem to start UDP connection automatically.

Two socket connections can be established at the same time, mapping to the main Serial port or USB COM port in case of the M1003G.

Before using AT+AUTOUDP, UDP and cellular settings MUST be setup properly using AT+IPUDP and AT+IPGPRS command respectively. See section 2.2.2 and 2.1.1 for more details.

**Syntax:** AT+AUTOUDP=<mode>

**Response:** +AUTOUDP: <mode>

#### Defined Values:

<mode>

- 0            disable auto UDP (for main Serial port and USB COM port).
- 1            enable auto UDP mapped to main Serial port, disable auto UDP mapped to USB COM port.
- 2            enable auto UDP mapped to USB COM port, disable auto UDP mapped to main Serial port.
- 3            enable auto UDP on both main and USB COM port.

#### Example:

| Command      | Response                      |
|--------------|-------------------------------|
| AT+AUTOUDP=0 | OK<br>Note : disable AutoUDP. |
| AT+AUTOUDP=1 | OK<br>Note: enable AutoUDP.   |
| AT+AUTOUDP?  | +AUTOUDP: 1<br>OK             |
| AT+AUTOUDP=? | +AUTOUDP: (0-1)<br>OK         |

#### Note:

- AUTOUDP connection is exclusive to other TCP/UDP feature. See chapter 24.
- Before enabling AUTOUDP, cellular settings MUST be properly set by AT+IPGPRS command and UDP settings by AT+IPUDP command, see section 2.2.2 and 2.1.1 for more details.
- If AUTOUDP is enabled, cellular reconnection will happen automatically if the modem loses cellular IP address.
- USB COM port is not available on the 2G model.
- ONLY cellular PDP context # 1 will be used. Please setup +IPGPRS settings with <Cid>=1.
- Once AUTOUDP is enabled, it will start the UDP socket connection automatically after 20 seconds.
- Once the UDP connection is established successfully, the serial port will go to data mode, all data entered to the serial port will be sent to remote UDP peer. No more AT commands will be accepted then.
- In UDP connected data mode, the DSR and DCD signals of the serial port will go to high.
- If UDP connection is broken the modem will try to reconnect automatically. During re-connection period serial port will go back to command mode, and DSR/DCD signal back to low.
- The setting will be saved, and after power off, the AUTOUDP will be restarted with the 20 seconds delay after power up.
- To stop AUTOUDP connection, you need to enter the command AT+AUTOUDP=0 either
  1. within 20 seconds after power up,
  2. during reconnection (serial port back to command mode),
  3. or by SMS (see chapter 10).
- Due to the nature of UDP socket connection, AT+AUTOUDP=0 may not be able to disconnect. in this case you may send command AT+IPCONNECT=1,0 to disconnect cellular connection.
- During AUTOUDP operation reset will happen in following cases:
  1. If no GPRS connection successful for 2 minutes.
  2. If failure to switch UART to Data mode.
  3. If undefined condition occurs in connection errors/callback handlers.

### 3.2.3 Buffering time

#### AT+AUFM

This command controls the buffering time of TCP/UDP data sent to remote peer when using automatic or AT command driven TCP/UDP connection.. Data coming from serial will be buffered for a "delay" period before being sent out.

**Syntax:** AT+AUFM=<delay>

**Response:** +AUFM: <delay>

#### Defined Values:

<delay> Delay units between sending buffered data to TCP/UDP peer. The actual delay time is calculated by the value of <delay> times 18.5 ms. So if <delay> is equal to 2 that means data will be sent to remote peer every 37ms (or immediately if internal buffer is full). Increasing this value can make the data packet size bigger especially when data flow is slow, thus reducing overhead. Default value: 2. Possible value: 1 to 255.

#### Example:

| Command    | Response                               |
|------------|--|
| AT+AUFCM=2 | OK<br>Note: set the +AUFCM value to 2. |
| AT+AUFCM?  | +AUFCM: 2<br>OK                        |
| AT+AUFCM=? | +AUFCM: (1-255)<br>OK                  |

**Note:**

- If the value is set too high the maximum data transfer speed may be decreased.
- Applies only when using automatic or AT command driven TCP/UDP connection.

### 3.2.4 Optional parameters

#### AT+AUOPT

This command lets user to set option parameters to control socket connection. There are three option parameters:

1. Socket idle period: period of connected socket with zero data traffic, socket will be closed when timeout.
2. Server idle period: period of connected socket with zero data traffic, cellular will be deactivated and reactivated when timeout.
3. Socket connect period: period of maximum allowed connection time, socket will be closed when timeout.
4. UDP prefix: will send a data set to server on each data connection.
5. Heartbeat period: send a heartbeat packet on period.
6. Serial prefix: will output a data on serial on each data connection.

| Option | Applicable mode | Serial port behavior if option enabled  |
|--------|-----------------|---|
| 1      | Client / Server | As client: in data mode all the time, data are buffered.<br>As server: in data mode when socket is connected, in command mode when socket is not connected (data not buffered). |
| 2      | Server          | n/a   |
| 3      | Client / Server | Depends on <option> #1 setting.   |
| 4      | Client / Server | n/a   |
| 5      | Client          | n/a   |
| 6      | Client / Server | n/a   |

**Syntax:** AT+AUOPT=<option>,<val>

**Response:** +AUOPT: <option>,<val>

**Defined Values:**

<option>

- 1 socket idle period (for client and server mode). After Auto TCP/UDP socket is connected, if there is no data transport, in both direction, for more than <val> (in minutes) the socket will be disconnected. Please read notes below when using it with TCP client mode.

<val> Unit is in minute. Default value is 0 (connection control disabled). Valid range is 0 to 65535.

2 server idle period (for server mode only). If the unit set as a server stays in listening mode for more than the <val> (in minutes) the PDP context will be deactivated, then reactivated, and server listening modem will be resumed. This option prevent the network from closing because of no data flow after some period.

<val> Unit is in minute. Default value is 0 (connection control disabled). Valid range is 0 to 65535.

3 socket connect period (for client and server mode). If a Auto TCP/UDP socket stays connected for more than the <val> (in minutes) the socket will be disconnected.

<val> Unit is in minute. Default value is 0 (connection control disabled). Valid range is 0 to 65535.

4 UDP only prefix data bytes. After Auto UDP is connected, the data will be outputed to the server.

<val> set of hexadecimal bytes entered between quote; example: "010203", will send 0x01, 0x02, 0x03.

5 heartbeat period. After Auto TCP/UDP is connected, an heartbeat packet "HELLO" (5 bytes) will be sent to remote socket on the period defined by <val>. The modem will expect a reply packet from remote that contain a hex 0x00 payload data (1 byte). If the modem cannot get the reply packet after sending 3 consecutive heartbeat packet, the modem will reset and reconnect.

<val> Unit is in second. Default value is 0 (connection control disabled). Valid range is 0 to 180.

6 serial prefix data. Whenever there is data received from remote TCP/UDP peer, the modem will first send out a "Prefix ID" by default 0x01 (1byte) from modem's serial port to the connected device, followed by received data. You can customize the prefix by adding a second parameter <prefix>.

<val> is 1 to activate it, 0 to disable (default).

<prefix> is optional by default it is 0x01. Prefix ID has to be entered as a hexadecimal number. Range from 0x00 to 0xFF (1 byte only).

**Example:**

| Command         | Reremotesponse   |
|-----------------|--|
| AT+AUOPT=1,5    | OK<br>Note: set the socket idle period to value to 5 (min).                                      |
| AT+AUOPT=2,720  | OK<br>Note: set the server idle period to value to 720 (min).                                    |
| AT+AUOPT=3,15   | OK<br>Note: set the socket connect period to value to 5 (min).                                   |
| AT+AUOPT=5,180  | OK<br>Note: activate heartbeat of 180s.  |
| AT+AUOPT=6,1,06 | OK<br>Note: activate and set prefix ID to 0x06 value.  |
| AT+AUOPT=1,0    | OK<br>Note: set the socket idle period to value to 0 (disable).                                  |
| AT+AUOPT?       | +AUOPT: 1,0<br>+AUOPT: 2,15<br>+AUOPT: 3,750<br>+AUOPT: 4,""<br>+AUOPT: 5,0<br>+AUOPT: 6,0<br>OK |
| AT+AUOPT=?      | +AUOPT: (1-6),(0-65535),(64),(0-180),(0-1)   |

**Note:**

- When <option> #1 is enabled with client mode, the serial port of the modem will be changed into data mode without waiting socket connection. And once data enter to serial port data will be buffered and then start connecting remote TCP server. This option is good when remote TCP server is not good for keeping socket all the time.
- If options are modified while connection is active, new entered values will apply only after a disconnection and new connection is established. Options #1, #2 & #3, currently require AutoTCP/UDP to be disabled then re-enabled.
- When socket for TCP Terminal is connected, cellular deactivation, by <option> #2 timeout, will be deferred.
- The heartbeat packet, <option> #5, will be sent only if there is no traffic on the socket.
- Option 4 of +AUOPT is strictly limited to UDP mode.
- Option 4 of +AUOPT is the first prefix sent.

# Chapter 4

## AT command driven TCP/UDP connection

This feature let user to make a TCP or UDP connection upon the AT+OTCP or AT+OUDP command. This socket connection feature does support DLE/ETX character coding. Only one of AT+OTCP or AT+OUDP connection can be active at a time.

Make sure you have made the cellular connection by AT+IPCONNECT command before making socket connection (see Chapter 25).

### 4.1 Closing connection command

#### AT+DLEMODE

When performing the AT command driven TCP or UDP socket connection, the attached host has the choice to code or not the ETX character. When DLEMODE is set to 0, no specific process is needed on ETX character. Meaning that it is not possible for a host to request an end of connection or to receive a clear indication of end of connection from the TCP/IP stack.

When DLEMODE is set to 1, the ETX character is activated to request or indicate an end of connection. ETX characters that belong to the payload data must be sent by the host on the serial port preceded by a DLE character. Similarly ETX characters received by the TCP/IP stack from the Internet are sent to the host through the serial port preceded by a DLE character.

"ETX" character is 0x03.

"DLE" character is 0x10.

**Syntax:** AT+DLEMODE=<mode>

**Response:** +DLEMODE: <mode>

#### Defined Values:

<mode>

- 1 enable DLEMODE.
- 0 disable DLEMODE (Default setting).

#### Example:

| Command      | Response          |
|--------------|-------------------|
| AT+DLEMODE=0 | OK                |
| AT+DLEMODE=1 | OK                |
| AT+DLEMODE?  | +DLEMODE: 1<br>OK |
| AT+DLEMODE=? | +DLEMODE: (0-1)   |

#### Note:

- DLEMODE is not available for automatic TCP/UDP connection.

## 4.2 Opening TCP connection

### AT+OTCP

This command is sent by the attached host to open a TCP connection to the TCP server specified by the AT+IPCTP command.

If socket connection is made successfully it will response CONNECT 115200 and the serial port will go to data mode, meaning that all data entered on the serial port will be sent to remote TCP/UDP peer.

If socket connection is unsuccessful or socket is disconnected afterward the modem will send out NO CARRIER message and back to command mode.

**Syntax:** AT+OTCP

**Response:** CONNECT 115200

**Example:**

| Command | Response   |
|---------|--|
| AT+OTCP | CONNECT 115200<br>Note : TCP connection made successfully.                                   |
| AT+OTCP | +CME ERROR 3<br>Note: fail, either IPCONNECT is not ready or socket service is used already. |
| AT+OTCP | NO CARRIER<br>Note: possibly remote server no response.                                      |

### Note:

- AT+OTCP connection is exclusive to other TCP feature. See chapter 24.
- Cellular connection has to be done and managed manually if using OTCP or OUDP, via the command +IPCONNECT detailed in section 2.1.2 on page 18.
- If TCP connection is unsuccessful or broken after connection the cellular connection will also be disconnected. (+IPCONNECT: 1,0). Enter AT+IPCONNECT=1,1 to reconnect cellular before entering AT+OTCP.
- AT+OTCP can only be used on one port at a time, you cannot have both Serial port and USB connected simultaneously.

## 4.3 Opening UDP connection

### AT+OUDP

This command is sent by the attached host to open a UDP connection to the UDP server specified by the AT+IPUDP command.

If socket connection is made successfully it will response CONNECT 115200 and the serial port will go to data mode, meaning that all data entered to the serial port will be sent to remote UDP peer.

If socket connection is unsuccessful or socket is disconnected afterward the modem will send out NO CARRIER message and back to command mode.

**Syntax:** AT+OUDP

**Response:** CONNECT 115200

**Example:**

| Command | Response   |
|---------|--|
| AT+OUDP | CONNECT 115200<br>Note: UDP connection made successfully.                                    |
| AT+OUDP | +CME ERROR 3<br>Note: fail, either IPCONNECT is not ready or socket service is used already. |
| AT+OUDP | NO CARRIER<br>Note: possibly remote server no response.                                      |

**Note:**

- AT+OUDP connection is exclusive to other TCP/UDP feature. See chapter 24.
- Cellular connection has to be done and managed manually if using OUDP, via the command +IPCONNECT detailed in section 2.1.2 on page 18.
- If UDP connection is unsuccessful or broken, after connection, the cellular connection will also be disconnected. (+IPCONNECT: 1,0). Enter AT+IPCONNECT=1,1 to reconnect cellular before entering AT+OUDP.
- Due to the nature of UDP socket connection, sending ETX characters (when DLEMODE is 1) may not be able to make disconnection.
- AT+OUDP can only be used on one port at a time, you cannot have both Serial port and USB connected simultaneously.



# Chapter 5

## Ping service

This feature is to make a ping (ICMP Echo Request) to a specified IP address and get back the echo result. Ping service can also be called by IPCONNECT as a tool to check Internet connection. See AT+IPOINT command in section 2.3 for details.

### 5.1 Setting up and executing ping command

#### AT+IPPING

**Syntax:** AT+IPPING=<mode>,<address>,<nb>,<delay>,<timeout>

**Response:** +IPPING : <address>,<echo\_time>

#### Defined Values:

<mode>

- 0,1 reserved.
- 2 configure ping address and parameters below.

<address> IP address of the target to be pinged. Can be set as an IPv4 format (xxx.xxx.xxx.xxx) or as a domain URL (i.e. domain.com). Maximum length 128 characters.

<nb> numbers of ping trials for each ping action. E.g. if the value is 3 will ping the target for 3 times. Default value is 3. Valid range is 1 to 10. Note: when used with +IPCONNECT check the ping is assumed fail if all ping trials fail.

<delay> time in second between each ping trial. Default value is 1. Valid range is 1 to 10.

<timeout> time in second before ping is timed out. Default value is 15. Valid range is 1 to 60.

<echo\_time> ping response time in ms.

#### Example:

| Command                            | Response   |
|------------------------------------|--|
| AT+IPPING=2,"210.103.11.18",3,1,15 | OK<br>Note : configure ping target (210.103.11.18), 3 ping trials total, 1 second between each trial, timeout limit 15                           |
| AT+IPPING                          | +IPPING : "210.103.11.18",562<br>+IPPING : "210.103.11.18",662<br>+IPPING : "210.103.11.18",762<br>OK<br>Note: execute ping action (no argument) |
| AT+IPPING=?                        | +IPPING: (0-2)[,(128),(1-10),(1-10),(1-60)]<br>OK<br>Note : possible arguments   |
| AT+IPPING?                         | +IPPING: "210.103.11.18",3,1,15<br>OK<br>Note: display current status  |

**Note:**

- Before making command driven ping action (AT+IPPING w/o argument) make sure cellular is connected (+IP-CONNECT: 1,1) and ping target and parameters are set properly.

# Chapter 6


## Dynamic DNS

To use this feature, we are strongly suggesting to get a special cellular plan from your network operator, with the following features:

1. network will assign a true public IP address to the modem upon cellular activations, and
2. that cellular connection allows incoming access from public Internet to the modem.

This feature lets the Maestro modem to log in Dynamic DNS service providers<sup>1</sup>, update the host name with Maestro modem current IP address. So user can access modem with preregistered host name. User can use this function together with "TCP Terminal" (see section 7.2) and can use Telnet to access modem and send AT command over Internet.

### 6.1 Description of operation

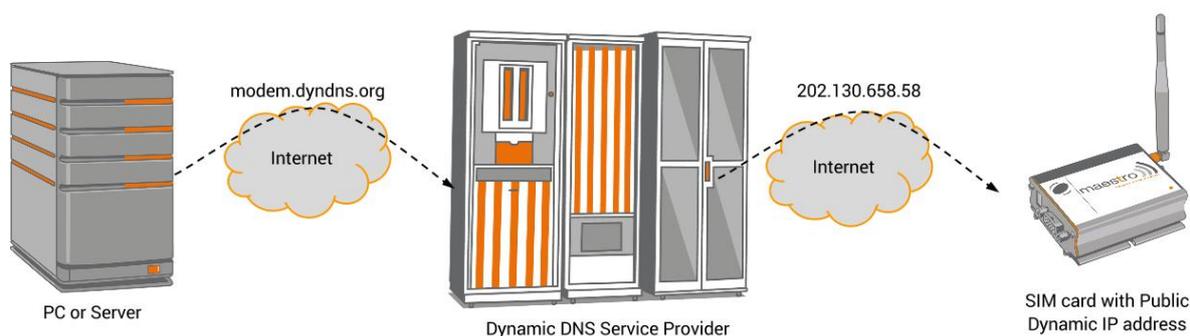

1. User need to create an account on DDNS service providers and register a host name. Following providers are tested working correctly: [www.dyndns.com](http://www.dyndns.com), [www.no-ip.com](http://www.no-ip.com)
2. Use AT+IPDDNSSERV command to enter DDNS update server URL and port number. Use AT+IPDDNSACCT to enter own account login, password and host name.
3. When IPCONNECT is ready, use AT+IPDDNSUPD command to update the above host name with modem's current IP address.
4. User can also use AT+IPDDNSUPD command to configure automatic DDNS update upon each time of IPCONNECT established

<sup>1</sup>Maestro Wireless Solution Ltd does not have affinity with any Dynamic DNS service providers. Maestro Wireless Solution Ltd does not guarantee any service provided by DDNS service providers and not liable to any loss or damage caused by such service.

## 6.2 Dynamic DNS server

### AT+IPDDNSSERV

**Syntax:** AT+IPDDNSSERV=<serv\_url>,<serv\_port>

**Response:** +IPDDNSSERV: <serv\_url>,<serv\_port>

**Defined Values:**

<serv\_url> URL of the update server. For example "dynupdate.no-ip.com" for www.noip.com. Check with your DDNS service provider for correct name.

<serv\_port> port number of the update server. For example 80 for www.noip.com. Check with your DDNS service provider for correct port number.

**Example:**

| Command                               | Response   |
|---------------------------------------|--|
| AT+IPDDNSSERV="members.dyndns.org",80 | OK<br>Note: enter DDNS service provider's update server information. |
| AT+IPDDNSSERV?                        | +IPDDNSSERV: "members.dyndns.org",80<br>OK                           |
| AT+IPDDNSSERV=?                       | +IPDDNSSERV: (64),(0-65535)<br>OK                                    |

## 6.3 Dynamic DNS account

### AT+IPDDNSACCT

**Syntax:** AT+IPDDNSACCT=<hostname>,<login>,<psswd>

**Response:** OK

**Defined Values:**

<hostname> Host name to be associated with modem's IP address. Host name should be registered in an DDNS account. Maximum length is 64 characters.

<login> Login user name of the DDNS service account. Maximum length is 32 characters.

<psswd> Login password of the DDNS service account. Maximum length is 32 characters.

**Example:**

| Command   | Response   |
|---|--|
| AT+IPDDNSACCT="my modem.ddns.net",<br>"maestro","maestro" | OK<br>Note: enter DDNS account and host name info              |
| AT+IPDDNSACCT?  | +IPDDNSACCT: "my modem.ddns.net",<br>"maestro","maestro"<br>OK |
| AT+IPDDNSACCT=?   | +IPDDNSACCT: (64),(32),(32)<br>OK                              |

## 6.4 Updating Dynamic DNS information

### AT+IPDDNSUPD

#### Syntax:

AT+IPDDNSUPD

AT+IPDDNSUPD=<auto\_upd>

#### Response:

OK

+IPDDNSUPD: <result>,<ret\_code>

#### Defined Values:

<auto\_upd>

- 0            disable automatic DDNS update.
- 1            enable automatic DDNS update (see notes for details).

<result>    result of DDNS update process. Related to the return code of DDNS update server. If <result> is 1 or 2 the update is assumed successful.

<ret\_code> return code of DDNS update server.

#### Example:

| Command        | Response   |
|----------------|--|
| AT+IPDDNSUPD=1 | OK<br>Note: enable automatic DDNS update.  |
| AT+IPDDNSUPD=0 | OK<br>Note: disable automatic DDNS update.   |
| AT+IPDDNSUPD   | +IPDDNSUPD: 1,"good 203.111.111.111"<br>OK<br>Note: perform DDNS update, successful.                             |
| AT+IPDDNSUPD   | +IPDDNSUPD: 3,"badauth"<br>OK<br>Note: perform DDNS update, unsuccessful.  |
| AT+IPDDNSUPD?  | +IPDDNSUPD: 3,"badauth"<br>OK<br>Note: automatic DDNS update disabled result of last DDNS update since power up. |
| AT+IPDDNSUPD=? | + IPDDNSUPD: (0-1)<br>OK   |

Table 6.1 list the relationship between <result> and <ret\_code>. Visit Website of DDNS service providers for the explanation of return code.

|                 |        |         |         |          |          |     |
|-----------------|--------|---------|---------|----------|----------|-----|
| <b>Result</b>   | 1      | 2       | 3       | 4        | 5        |     |
| <b>Ret_code</b> | good   | no_chg  | badauth | donator  | notfqdgn |     |
| <b>Result</b>   | 6      | 7       | 8       | 9        | 10       | 11  |
| <b>Ret_code</b> | nohost | numhost | abuse   | badagent | dnserr   | 911 |

Table 6.1: Relation between result and ret\_code

**Note:**

- If the DDNS update process fails because of failure to get server response the <result> maybe a negative value, contact Maestro Wireless to get more details.
- If automatic DDNS update enabled, modem will detect cellular connection and start DDNS update once connection is established. If update fails, it will retries 3 times maximum. User can enter AT+IPDDNSUPD? to check the result of last update result.

# Chapter 7

## TCP terminal

To use this feature, we are strongly suggesting to get a special cellular plan from your network operator, with the following features:

- network will assign a public IP address to the modem upon cellular activation,
- cellular connection allows incoming access from public Internet to the modem.

This feature enables sending AT commands to the modem remotely through a TCP channel. User can use Telnet type terminal to connect to the modem and control it by sending AT commands.

### 7.1 Description of the Operation

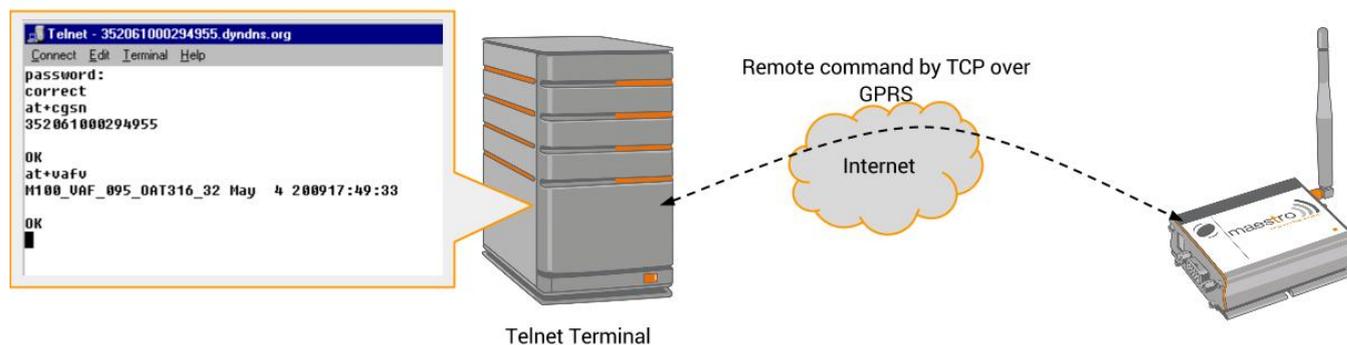


Figure 7.1.1: Example of TCP Terminal using Telnet

1. Uses AT+TCPTERM command to configure password port for the TCP terminal, and enable TCP terminal function.
2. After about 20 seconds modem will connect to the Internet automatically. And then will wait for connection on the TCP port specified.
3. User from Internet can use Telnet application to connect the port sets for TCP terminal. User need to know the IP address of the modem. Or with the aid of Dynamic DNS (Chapter 6) user can use the host name associated to the modem.
4. Once connected modem will prompt for a password. If password is correctly entered, user can send AT command to the modem.

## 7.2 TCP Remote Terminal

### AT+TCPTERM

**Syntax:** AT+TCPTERM =<mode>[,<psswd>,<port>,<timeout>]

**Response:** +TCPTERM =<stat>,<psswd>,<port>,<timeout>

#### Defined Values:

<mode>

- 0           disable TCP Terminal.
- 1           enable TCP Terminal.
- 2           configure TCP Terminal parameters.

<psswd>   login password for TCP Terminal. When user opens the modem TCP Terminal port it will prompt for a password. User need to enter the password set with this parameter. User has 3 retries to enter correct password. If password is correct user can enter AT command otherwise TCP connection will be closed. Password consists of 1 to 16 alphanumeric characters. Default is "000000" (6 zeros).

<port>    port number of TCP Terminal. Please do not set to the same value of port number in +IPTCP and +IPUDP command. Default is 23. Valid value is 1 to 65535.

<timeout> maximum time in second TCP terminal will wait for an entry after TCP terminal opened. If no data received in this period the connection will be closed. Default is 30. Valid value is 1 to 65535.

#### Example:

| Command                     | Response   |
|-----------------------------|--|
| AT+TCPTERM=2,"123456",23,30 | OK<br>Note: configure TCP Terminal, password: 123456, port: 23, timeout: 30(secs). |
| AT+TCPTERM=1                | OK<br>Note: enable TCP terminal.   |
| AT+TCPTERM=0                | OK<br>Note: disable TCP terminal.  |
| AT+TCPTERM?                 | +TCPTERM: 1,"123456",23,30   |
| AT+TCPTERM=?                | +TCPTERM: (0-2),(16),(1-65535),(1-65535)<br>OK                                     |

#### Note:

- If TCP terminal is enabled the modem will connect to cellular (+IPCONNECT=1,1) about 15 seconds after power up.
- Only one TCP terminal connection can be made at a time. Any further connection requested will be refused.
- Not all AT commands could be executed. If not allowed command is entered "command not allowed" message will be returned.
- Command echo feature is always enabled (except entering password).
- Unsolicited codes like "RING", "+CMTI", etc... will not be displayed on TCP terminal.
- Never send 'interactive' AT command by TCP Terminal, e.g. AT+CMGS, as it cannot return the prompt to the sender for second input.
- Always think twice before you send AT command. For example if you send AT+CPOF it will turn off the modem, and you need to go to access the modem to reset it.

# Chapter 8

## E-mail sending (SMTP) service

*Be sure to have access to a SMTP server before using this feature. Network providers may have a dedicated SMTP server, please verify connection details and availability with them first.*

Modem is able to send an email via a SMTP server. Parameters like server name, address of sender and recipient, email subject and email content need to be specified before sending an email, either by AT commands, or while using Command String email service (See Chapter 21 for more details about Command String services).

### 8.1 Description of the Operation

1. Enter the following information by AT commands<sup>1</sup>:
  - (a) SMTP server information (address, port, login)
  - (b) Email addresses of sender and recipient(s)
  - (c) Email subject
  - (d) Email content
2. Make IP connection (see Chapter 2).
3. Use AT+EMSEND command to send out email (see Section 8.6).
4. An email can contain:
  - (a) Maximum up to 1024 (pre-saved) + 128 (command line additional) characters,
  - (b) Three group of recipient: "TO", "CC" and "BCC". Each group can have up to 64 characters of email address(es),
  - (c) Subject up to 128 characters, from a choice 10 pre-saved subject record.

### 8.2 SMTP server

#### AT+IPSMTP

Command to setup SMTP server parameters.

**Syntax:** AT+IPSMTP=<port>,<auth>,<server>,<id>,<pwd>

**Response:** +IPSMTP: <port>,<auth>,<server>,<id>,<pwd>

#### Defined Values:

- |        |  |
|--------|--|
| <port> | port number of the SMTP server. Default value is 25. |
| <auth> | authentication type used for authentication:         |
| 0      | no authentication required (default),                |

<sup>1</sup>Required information for a minimal email are: SMTP server, sender address and one recipient address

- 1 authentication with no encryption,
- 2 authentication used with encrypted user name/password in MIME64 during AUTH LOGIN phase.

<server> IP address of SMTP server (in xxx.xxx.xxx.xxx format) or an alpha numeric string format (e.g. smtp.server.com). Maximum 120 characters. Note: if alpha numeric string format is used, make sure the cellular network has proper DNS service available.

<id> login name of the user. Maximum 64 characters.

<pwd> password for the user. Maximum 64 characters.

**Example:**

| Command  | Response  |
|--|---|
| AT+IPSMTP=25,1,"smtp.network.com","login","pssd" | OK<br>Note: setup SMTP parameter (using authentication with no encryption). |
| AT+IPSMTP=25,0,"smtp.network.com"                | OK<br>Note: setup SMTP parameter (no authentication).                       |
| AT+IPSMTP?                                       | +IPSMTP: 25,0,"smtp.network.com","", ""<br>OK                               |
| AT+IPSMTP=?                                      | +IPSMTP: (0-65535),(0-2),(120),(64),(64)<br>OK                              |

### 8.3 Email address

**AT+EMADDR**

To save, read and delete email addresses of sender, recipient, CC recipient and BCC recipient.

**Syntax:** AT+EMADDR=<oper>,<id>,<address>

**Response:** +EMADDR: <oper>,<id>,<address>

**Defined Values:**

<oper> type of operation:

- 0 store email address to flash,
- 1 read email address from flash,
- 2 erase email address from flash.

<id> identification number (id) of the email address. Valid value is 0 to 50.

- 0 id of the sender address (mandatory),
- 1-50 id of recipient email address.

<address> email address to be stored.

**Example:**

| Command                   | Response   |
|---------------------------|--|
| AT+EMADDR=0,0,"a@abc.com" | OK<br>Note: store email address id #0 (sender address).    |
| AT+EMADDR=0,1,"b@abc.com" | OK<br>Note: store email address id #1.                     |
| AT+EMADDR=1,1             | +EMADDR: 1,"b@abc.com"<br>Note: read stored address id #1. |
| AT+EMADDR=2,1             | OK<br>Note: erase email address id #1.                     |
| AT+EMADDR=?               | +EMADDR: (0-2),(0-50),(64)<br>OK                           |

**Note:**

- The program will NOT check if the address is in valid format or not.
- Email address stored with <id>=0 can only be used as of the sender address, not recipient.
- For each <id> you can save more than one email address, separated by comma, e.g. *AT+EMADDR=0,1,"me@a.com, you@a.com, him@a.com"*. But each address list limited to 64 characters.

## 8.4 Email subject

**AT+EMSUBJ**

To save, read and delete email subject (title).

**Syntax:** AT+EMSUBJ=<oper>,<id>,<subj>

**Response:** +EMSUBJ: <id>,<subj>

**Defined Values:**

<oper> type of operation:

- 0 store email subject to flash.
- 1 read email subject from flash.
- 2 erase email subject from flash.

<id> identification number (id) of the email subject. Valid value is 1 to 10.

<subj> email subject to be stored. Maximum 128 characters for each subject.

**Example:**

| Command                          | Response  |
|----------------------------------|---|
| AT+ EMSUBJ=0,1,"This is subj #1" | OK<br>Note: store email subject #1.   |
| AT+EMSUBJ=1,1                    | +EMSUBJ: 1,"This is subj #1"<br>Note: read stored email subject with id #1. |
| AT+EMSUBJ=2,1                    | OK<br>Note: erase email subject with id #1.                                 |
| AT+EMSUBJ=?                      | +EMSUBJ: (0-2),(1-10),(128)<br>OK   |

**Note:** It is recommend to use only alpha-numeric characters (ASCII value 32 to 127) for email subject content.

## 8.5 Email body

### AT+EMBODY

To save, read and delete pre-saved email body (content). Up to 3 email bodies with 1024 characters max can be stored. The <id> field is the id number of the email body to be stored.

To save email body, first enter AT+EMBODY=0,<id> then <ENTER> and wait for "> " prompt. Then simply type email body content, <Ctrl-Z> (ASCII 26) to finish. This command can be aborted using the <ESC> (ASCII 27) character when entering text.

#### Syntax:

AT+EMBODY=<oper>,<id>  
text is entered <Ctrl-Z / ESC>

Response:

+EMBODY: <id>  
Email body entered  
OK

#### Special syntax for <oper> 0:

AT+EMBODY=0,<id>  
text is entered <Ctrl-Z / ESC>

Response:

+EMBODY: <id>,<len>  
OK

#### Defined Values:

<oper> type of operation:

- 0 store email body to flash.
- 1 read email body from flash.
- 2 erase email body from flash.

<id> identification number (id) of the email body. Valid value is 1 to 3.

<len> length (number of characters) of the email body stored.

#### Example:

| Command  | Response  |
|--|---|
| AT+EMBODY=0,1<br>This is email body #1<Ctrl-Z> | ><br><i>Note: enter email body with id #1.</i><br>+EMBODY: 1,21<br>OK<br><i>Note: successful stored 21 characters as email body with id #1.</i> |
| AT+EMBODY=1,1                                  | +EMBODY: 1<br>This is email body #1<br>OK<br><i>Note: read stored email body with id #1.</i>  |
| AT+EMBODY=2,1                                  | OK<br><i>Note: erase email body with id #1.</i>   |
| AT+EMBODY=?                                    | +EMBODY: (0-2),(1-3)<br>OK  |

**Note:**

- As a standard SMTP type email, the body should contain alpha-numeric characters only.
- Each email body can contain up to 1024 characters. If data entered goes over 1024 characters, only the first 1024 characters will be saved.
- On saving email body to a same <id> old body will be over written.

## 8.6 Sending an email

### AT+EMSEND

To send an email with pre-saved email subject (using *AT+EMSUBJ* command, section 8.4); pre-saved email body (content) (using *AT+EMBODY* command, section 8.5), plus an additional email body to pre-saved email address(es) (using *AT+EMADDR* command, section 8.3). Maximum three group of recipient: "TO", "CC" and "BCC"; can be sent for a single email.

cellular connection (*+IPCONNECT=1,1* see section 2.1.2) must to be made and SMTP parameters have to be entered properly before sending email otherwise will return *+CME ERROR: 3*. When finishing a result code will be returned. Result code "0" means email transferred success, otherwise there is error. See following for more explanation.

**Syntax:** AT+EMSEND= <to\_id>,<cc\_id>,<bcc\_id>,<subj\_id>,<body\_id>,<add\_body>

**Response:** +EMSEND: <result>

#### Defined Values:

|            |   |
|------------|---|
| <to_id>    | identification number (id) of the email address(es) that as a normal email recipient. Valid value is 0 to 50. ('0' or missing parameter means no recipient for this email)                    |
| <cc_id>    | identification number (id) of the email address(es) that as a "carbon copy" (cc) email recipient. Valid value is 0 to 50. ('0' or missing parameter means no cc recipient for this email)     |
| <cc_id>    | identification number (id) of the email address(es) that as a "blind carbon copy" (cc) email recipient. Valid value is 0 to 50. ('0' or missing parameter means no recipient for this email). |
| <subj_id>  | Identification number (id) of the email subject. Valid value is 0 to 10. ('0' or missing parameter means no subject for this email).  |
| <body_id>  | identification number (id) of the email body (content). Valid value is 0 to 3. ('0' or missing parameter means no saved body will be used for this email).                                    |
| <add_body> | additional email body (content) to be sent. Maximum 128 characters can be sent. <add_body> will be added just after body indicated by <body_id> (if any).                                     |
| <id>       | identification number (id) of the email body. Valid value is 1 to 3.  |
| <result>   | result code of the email sending process:   |
| 0          | email sending successful.   |
| -1         | reserved (Contact Maestro Wireless).  |
| -2         | reserved (Contact Maestro Wireless).  |
| -3         | SMTP setup fail (Check <i>+IPSMTP</i> parameters).  |
| -4         | cannot resolve SMTP server/ server not found (Check <i>+IPSMTP</i> parameters).   |
| -5         | connect SMTP server timeout (Retry later).  |
| -99        | other error (Contact Maestro Wireless).   |
| 4xx-5xx    | SMTP protocol reply code (Check SMTP document (RFC 821) for explanation).   |

**Example:**

| Command                     | Response  |
|-----------------------------|---|
| AT+EMSEND=1                 | +EMSEND: 0<br>OK<br>Note: minimum email (no subject and body) successfully sent email to email address stored id #1.  |
| AT+EMSEND=0,0,2             | +EMSEND: 0<br>OK<br>Note: minimum email (no subject and body) successfully sent email to email address stored id #1 as "bcc" recipient.   |
| AT+EMSEND=1,2,3,1,1,"extra" | +EMSEND: 0<br>OK<br>Note: email with subject stored with <id>=1; body stored with <id>=1 and additional body "extra" is sent to:<br>Address with id# 1 as recipient,<br>Address with id# 2 as cc recipient,<br>Address with id# 3 as bcc recipient. |
| AT+EMSEND=1,2,3,1,1,"extra" | +CME ERROR: 3<br>Note: email sending fail (possible reason: cellular not connected).  |
| AT+EMSEND=?                 | +EMSEND: [(1-50),(1-50),(1-50),(1-10),(1-4),(128)]<br>OK  |

**Note:**

- As a standard SMTP type email, the body should contain alpha-numeric characters only.
- A "minimum" email contains at least sender's email address and one recipient address. Subject and body can be left empty.
- When one email is being sent you cannot send another email. To put a queue of emails please use Command String "EM" (email sending) service, see Chapter 19.0.1.

# Chapter 9

## TCP Socket Communication Service

Similar to email sending service, this feature lets the modem sending raw TCP message, up to 256 bytes, to a TCP server. Useful for M2M communication client to send data to server without any kind of protocol overhead. It can be also used with Command String for sending status of plug-in board.

The socket communication service is one way only. Data sent in the direction from server to modem during connection is discarded.

### 9.1 Description of the Operation

1. Enter the following information by AT commands (see following sections):
  - (a) TCP server information (address, port, retry).
  - (b) TCP message content.
2. Make IP connection (see Chapter 2).
3. Use AT+SCSEND command to send out message, or a message can contain maximum up to 128 (pre-stored) + 128 (command line additional) characters.

### 9.2 TCP socket

#### AT+SCHOST

This command is to set TCP server parameters.

**Syntax:** AT+SCHOST=<oper>,<id>[,<address>,<port>,<retry>,<delay>,<type>]

**Response:** +SCHOST: <id>,<address>,<port>,<retry>,<delay>,<type>

#### Defined Values:

- |          |  |
|----------|--|
| <oper>   | type of operation:   |
| 0        | enter host settings.   |
| 1        | read host settings.  |
| 2        | erase entered host settings.   |
| <id>     | identification number of the host setting to be accessed. Valid value is 1 to 10.  |
| <server> | IP address of host (in xxx.xxx.xxx.xxx format) or an alpha numeric string format (e.g. myhost.com). Maximum 120 characters. Note: if alpha numeric string format is used, make sure the cellular network has proper DNS service available. |
| <port>   | port number of the host server. Valid range is 1 to 65535.   |
| <retry>  | number of retry after the first connection unsuccessful. Each retry will be delayed according to <delay> parameter. Default value is 0 (no retry). Valid range is 0 to 10.   |

<delay> time of delay before the next connection retry, in minute. Default value is 1. Valid range is 1 to 60.

<type> type of server connection:

|   |                |
|---|----------------|
| 0 | TCP (default), |
| 1 | UDP.           |

**Example:**

| Command                              | Response  |
|--------------------------------------|---|
| AT+SCHOST=0,1,"myhost.com",23,2,10,0 | OK<br>Note : setup host TCP "myhost.com" with id #1,<br><port>=23,<retry>=2,<delay>=10. |
| AT+SCHOST=1,1                        | +SCHOST: 1,"myhost.com",23,2,10<br>OK<br>Note: display host setting with id #1.         |
| AT+SCHOST=2,1                        | OK<br>Note: erase host setting with id #1.  |
| AT+SCHOST=?                          | +SCHOST: (0-2),(1-10),(128),(1-65535),(0-10),(1-60),(0-1)<br>OK                         |

### 9.3 TCP socket message

**AT+SCMESS**

To save, read and delete socket communication message. Up to 3 messages with 1024 characters max can be stored.

The <id> field is the id number of the message to be stored. To save message body, first enter AT+SCMESS=0,<id> then <ENTER> and wait for "> " prompt. Then simply type content, <Ctrl-Z> (ASCII 26) to finish.

This command can be aborted using the <ESC> (ASCII 27) character when entering text.

**Syntax:**

AT+SCMESS=<oper>,<id>

Response:

+SCMESS: <id>  
message entered  
OK

**Special syntax for <oper> 0:**

AT+SCMESS=0,<id>  
text is entered <Ctrl-Z / ESC>

Response:

+SCMESS: <id>,<len>  
OK

**Defined Values:**

<oper> type of operation:

|   |                     |
|---|---------------------|
| 0 | enter message body. |
| 1 | read saved message. |

2 erase saved message.

<id> identification number (id) of the message. Valid value is 1 to 3.

**Example:**

| Command   | Response   |
|---|--|
| AT+SCMESS=0,1<br>This is message #1<Ctrl-Z><br><i>Note: enter message body with &lt;id&gt;=1.</i> | ><br>+SCMESS: 1,18<br>OK<br><i>Note: successful stored 18 characters as message with &lt;id&gt;=1.</i> |
| AT+SCMESS=1,1   | +SCMESS: 1<br>This is message body #1<br>OK<br><i>Note: read stored message with &lt;id&gt;=1.</i>     |
| AT+SCMESS=2,1   | OK<br><i>Note: erase message body with &lt;id&gt;=1.</i>   |
| AT+SCMESS=?   | +SCMESS: (0-2),(1-3)   |

**Note:**

- Each message can contain up to 128 characters. All characters entered after 128<sup>ht</sup> will be discarded.
- On entering message to a same <id> old message will be over written.

## 9.4 Sending a TCP socket message

### AT+SCSEND

To send a message to a pre-saved TCP host with or without one pre-saved message content, plus additional message entered on command line. A minimum of 1 byte message needs to be sent otherwise it will send an error.

cellular connection (+IPCONNECT=1,1) must to be made and host parameters have to be entered properly before sending otherwise will return +CME ERROR: 3.

When finishing a result code will be returned. Result code "0" means message transferred success, otherwise there is error.

**Syntax:** AT+SCSEND= <to\_id>,<mess\_id>,<add\_mess>

**Response:** +SCSEND : <result>

**Defined Values:**

<to\_id> identification number (id) host entered using AT+SCHOST command. Valid value is 1 to 10.

<mess\_id> identification number (id) of the saved message. Valid value is 1 to 3.

<add\_mess> additional message to be sent. Maximum 128 characters can be sent. <add\_body> will be added just after message indicated by <mess\_id> (if available).

<result> result code of the email sending process:

- 0 message sending successful.
- 1 reserved (contact Maestro Wireless support).
- 2 reserved (contact Maestro Wireless support).

- 3 host setup fail (check +SCHOST parameters).
- 4 cannot resolve host server / host not found (check +SCHOST parameters).
- 5 connect host server timeout (retry later).
- 99 other error (contact Maestro Wireless support).

**Example:**

| Command               | Response  |
|-----------------------|---|
| AT+SCSEND=1,0,"A"     | +SCSEND: 0<br>OK<br>Note: minimum message(1 character) successfully sent to host address stored <id>=1.               |
| AT+SCSEND=1,1,"extra" | + SCSEND: 0<br>OK<br>Note: message content saved with <id>=1; and additional message "extra" is sent to: host <id>=1. |
| AT+SCSEND=1,1,"extra" | +CME ERROR: 3<br>Note: message sending fail (possible reason: IP not connected).                                      |
| AT+SCSEND=1,1,"extra" | +EMSEND: -4<br>OK<br>Message sending fail (cannot find host).   |
| AT+SCSEND=?           | +SCSEND: (1-10),(1-3)[,{128}]<br>OK   |

**Note:**

- A "minimum" message should contain at least one byte (character) either from saved or additional message.
- If saving message to a same <id>, old message will be over written.

# Chapter 10

## Remote AT command by SMS

This feature is to control the modem to interpret AT command from incoming SMS, executing it, and return the result to sender by SMS.

The user can enable the modem to receive AT command by incoming SMS.

### 10.1 Description of the operation

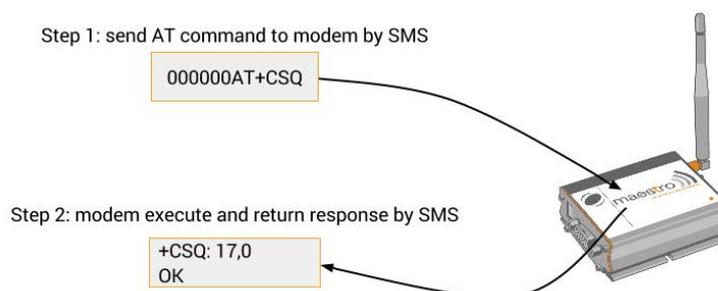


Figure 10.1.1: Example of remote AT command by SMS

1. When enabled, the modem will treat the incoming SMS as a source of AT command only if all of the following conditions (a, b and c) are fulfilled:
  - (a) The content of SMS sent to the modem is using standard 7-bit GSM data decoding scheme,
  - (b) The first 6 characters of the SMS content matches the <key> parameter set by AT+SMSAT command (default key is "000000"),
  - (c) The 7th and 8th characters of the SMS content is "AT" (in capital letters).
2. If SMSAT is enabled, the modem will read each incoming SMS, if the conditions mentioned in 1 are matched the message will be executed, even it is an invalid AT command.
3. When using SMSAT feature, only +CNMI:x,1,x,x,x setting could be used (i.e. incoming message will be stored in SIM card).
4. The maximum length of the AT command is limited by length of SMS, i.e. 160-6 = 154 characters.
5. When the SMS AT command is executed, all intermediate and final responses will be buffered recorded, then return to the sender's phone number in one single SMS.
6. If response(s) of the AT command is (are) more than 160 characters, only the first 160 characters will be returned.
7. In case the modem cannot get terminal response within 26 seconds, the modem will then abort the command, and return intermediate responses (if present).
8. If the SMSAT feature is enabled, all incoming SMS, either with valid AT command or not, will be erased. This is to prevent SIM card memory from fully filled; such the modem will not receive new SMS.

## 10.2 Remote AT command by SMS

### AT+SMSAT

**Syntax:** AT+SMSAT=<mode>(<param>)

**Response:** OK

#### Defined Values:

<mode> is the configuration mode:

- 0 disable remote AT command by SMS.
- 1 enable remote AT command by SMS.
- 2 change the value of the password <param>.
- 3 change the SMS response trigger. <param> is 0 to disable SMS response, 1 to enable (default value).

<key> is a 6 ASCII character key. Only incoming SMS with the first 6 characters matching with this key will be treated as a valid source of remote AT command.

#### Example:

| Command           | Response                                     |
|-------------------|--|
| AT+SMSAT=0        | OK<br>Note: disable remote AT command by SMS |
| AT+SMSAT=1        | OK<br>Note: enable remote AT command by SMS  |
| AT+SMSAT?         | +SMSAT: 1,"000000",1<br>OK                   |
| AT+SMSAT=2,123456 | OK<br>Note: set the password to be 123456    |
| AT+SMSAT=3,0      | OK<br>Note: disable the SMS response         |
| AT+SMSAT=?        | +SMSAT: (0-2),(6),(0-1)<br>OK                |

## 10.3 Limitation and caution when using remote AT command


This feature will not 'judge' the result of executing the command, so care has to be taken not to enter improper command that make the modem becoming out of control:

1. Never send 'interactive' AT command by SMS, e.g. AT+CMGS=... This feature cannot return the prompt to the sender for second input
2. Always wait for the return SMS with AT responses before you send another SMS AT command.
3. It could be in some case (e.g. network failure) the modem cannot return response SMS. The modem will try sending response SMS for three times max. If still not successful it will abort.
4. Always think twice before you send AT command by SMS. For example, if you send AT+CPOF it will turn off the modem, and you need to go on site to access the modem to reset it.
5. Some AT commands can't be sent over SMS. See Chapter 27.

# Chapter 11

## Input/Output port control

M100 3G is equipped with two I/O ports on the power connector. Each port is connected to an input and output pin inside.

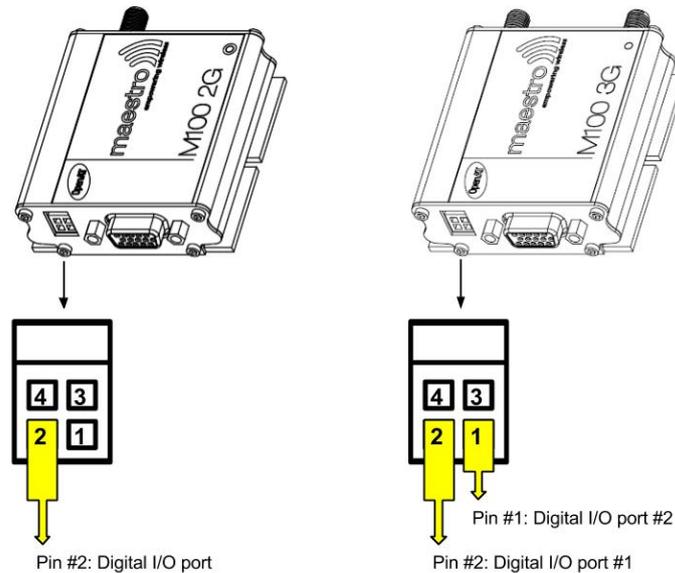

The SmartPack supports I/O port function with two sets of AT commands:

1. I/O board control commands (originally from Heritage modem I/O expansion plug-in): +IOBR, +IOBW, +IOBOR. Those commands control the two I/O ports functions both input and output.
2. I/O port triggered AT commands (AT+IOAT, originally from earlier M100/M100evo). This command use the I/O port #1 as a sensor. If the input matches the condition a specified AT command will be executed.

Both commands can be used at the same time. And some settings are shared by both (see below).

### 11.1 Relationship between input and output of I/O ports

Please refer to M100 3G user guide for the electrical connection method for input or output applications.

Each port is connected to an input and output pin inside modem. However an external DC voltage signal **MUST** be applied in order to use I/O ports. Output pin can be set to On (1) or Off (0) by AT command. Input pin can be read by AT command as either high (1) or low (0).

Following table list the relationship between external DC input, input and output pin:

| External DC input | High | Low | High | Low |
|-------------------|------|-----|------|-----|
| Output setting    | 1    | 0   | 0    | 1   |
| Input reading     | 1    | 1   | 0    | 1   |

## 11.2 I/O control AT command

### 11.2.1 Read digital input status

#### AT+IOBR

Read the value of one or all input pins on I/O ports.

**Syntax:** AT+IOBR[=<pin>]

#### Response:

+IOBR: <val><val>

+IOBR: <pin>,<val>

#### Defined Values:

<pin> id of the digital input read. Valid value is from 1 to 2. If <pin> entry is omitted all input pins will be read.

<val> current value of the digital input:

- 1 input is high.
- 0 input reading is low

#### Example:

| Command   | Response  |
|-----------|---|
| AT+IOBR   | +IOBR: 00<br>OK<br>Note: read all digital input status.   |
| AT+IOBR=1 | +IOBR: 1,0<br>OK<br>Note: read the value of input pin #1. |
| AT+IOBR=? | +IOBR[: (1-2)]<br>OK                                      |

#### Note:

- When command is entered without <pin> entry, the response shows the value of input pins in a series of 0 or 1, from left (pin #1) to right (pin#2).

### 11.2.2 Set digital output status

#### AT+IOBW

Set (write) the value of one or all digital outputs pins on I/O ports.

#### Syntax:

AT+IOBW=<pin>,<val>

AT+IOBW=<val><val>

#### Response:

+IOBOR: <pin>,<val>

+IOBOR: <val>,<val>

**Defined Values:**

<pin> id of the digital output to be read. Valid value is 1 or 2.  
 <val> current value of the digital output:  
 0 output is OFF, opened.  
 1 output is ON, closed (shorted).

**Example:**

| Command     | Response   |
|-------------|--|
| AT+IOBW=11  | OK<br>Note: set all output to value "1".                         |
| AT+IOBW=01  | OK<br>Note: set output #1 to "0", and #2 to "1".                 |
| AT+IOBW=2,0 | OK<br>Note: set output #2 to "0", other outputs are not changed. |
| AT+IOBW=?   | +IOBW: ("00"- "11",1-2) [, (0-1)]<br>OK                          |

**Note:**

- To set all output value in one command, enter the AT+IOBW with a set of 2 digits. (only 0 or 1 is allowed)
- The output state will be set to default after on-off or software reset.

**11.2.3 Read digital output status**

**AT+IOBOR**

Read the value of one or all output pins on I/O ports.

**Syntax:** AT+IOBOR[=<pin>]

**Response:**

+IOBOR: <val><val>

+IOBOR: <pin>,<val>

**Defined Values:**

<pin> id of the digital output read. Valid value is from 1 to 2. If <pin> entry is omitted all output pins will be read.  
 <val> current value of the digital output:  
 0 output is OFF, opened.  
 1 output is ON, closed (shorted).

**Example:**

| Command    | Response  |
|------------|---|
| AT+IOBOR   | +IOBOR: 00<br>OK<br>Note: read all digital outputs status.  |
| AT+IOBOR=1 | +IOBOR: 1,0<br>OK<br>Note: read the value of output pin #1. |
| AT+IOBOR=? | +IOBOR[: (1-2)]<br>OK                                       |

**Note:**


- When command is entered without <pin> entry, the response shows the value of output pins in a series of 0 or 1, from left (pin #1) to right (pin#2).

# Chapter 12

## Input/Output triggered AT command


This feature uses the Input/Output port as a trigger to execute an AT command when the specified condition is met.

### 12.1 Description of the operation

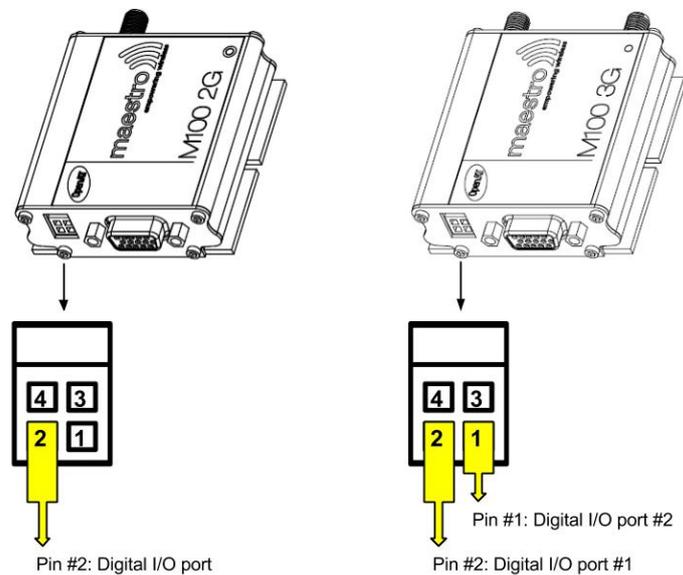


1. When the I/O port is connected to battery negative side:
  - (a) switch closed: logic level low
  - (b) switch open: logic level high
2. The specified AT command will be executed.

When set as low-to-high triggering:

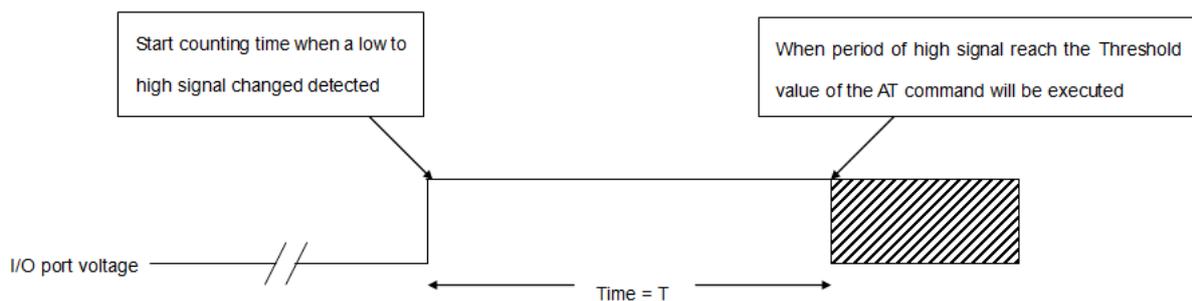

When set as high-to-low triggering:

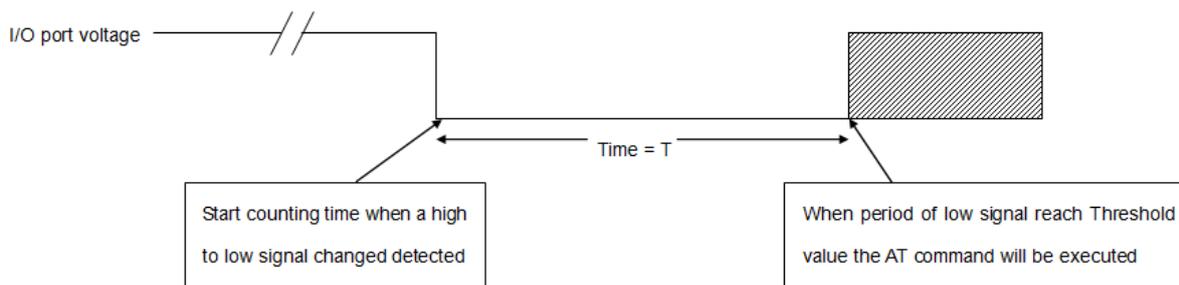

## 12.2 Activating I/O triggered AT command

### AT+IOAT

**Syntax:** AT+IOAT=<mode>(<dir>,<threshold>,<cmd>)

**Response:** +IOAT: <mode>,<dir>,<threshold>,<cmd>

#### Defined Values:

<mode> is the configuration mode:

- 0 disable I/O triggered AT command.
- 1 enable I/O triggered AT command.
- 2 configure I/O triggered AT command parameters.

<dir> is the triggering condition:

- 0 configure as low-to-high condition
- 1 configure as high-to-low condition

<threshold> is the time required, after the condition is reached, before triggering the AT command. Unit is hundred of millisecond from 0 to 50.

<cmd> is the AT command to be executed when the condition and threshold are met. Maximum length of the AT command is 128 characters.

#### Example:

| Command                        | Response   |
|--------------------------------|--|
| AT+IOAT=0                      | OK<br>Note: disable I/O triggered AT command   |
| AT+IOAT=1                      | OK<br>Note: enable I/O triggered AT command  |
| AT+IOAT?                       | +IOAT: 1,1,10,""<br>OK   |
| AT+IOAT=2,1,10,"AT+IPR=115200" | OK<br>Note: set I/O triggered AT command parameters to trigger the specified AT command after 1 second from low-to-high. |
| AT+IOAT=?                      | +IOAT: (0-2),(0-1),(1-50),(128)<br>OK  |

**Note:**

- The I/O port is limited to drain maximum 10mA of current. Do not over voltage the I/O port.
- Use only cable/metal contact designed for Molex MicroFit connector.
- The application will NOT check the command <cmd> entered. It will execute the command even if the command is invalid.
- When triggered, the command will not output any response to the external serial port.
- Do not enter "interactive" command (i.e *+CMGS*, *+WDWL*,...), otherwise the application will be stuck waiting for user input.
- If +IOAT is enable, no other AT command can control the I/O port.
- Switching below 100ms cannot be detected by the modem.




# Chapter 13

## Analog Input triggered AT command


**Note: Available only on M100 2G !**

This feature uses the Analog Input port as a trigger to execute an AT command when the specified condition is met.

### 13.1 Description of the operation

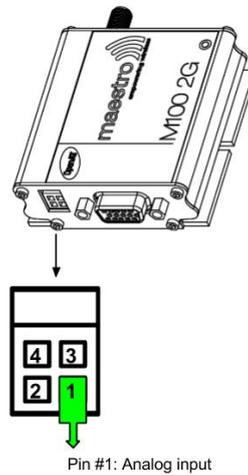

1. Connect an external analog voltage of maximum 5V.
2. Every 100ms the analog value is checked, it will trigger if:
  - (a) it exceeds high limit (low-to-high trigger)
  - (b) it goes below low limit (high-to-low trigger)
3. The specified AT command will be executed.

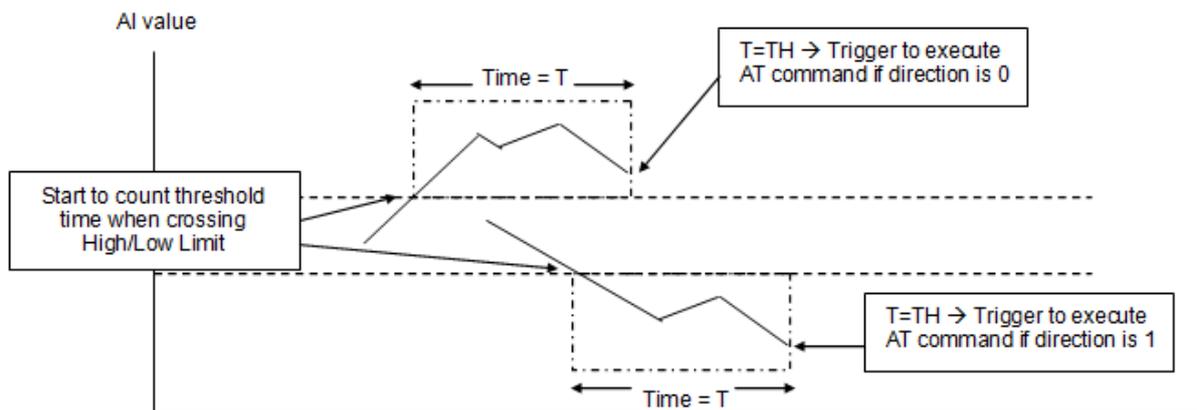

## 13.2 Activating analog triggered AT command

### AT+ADCAT

**Syntax:** AT+ADCAT=<mode>(,<dir>,<threshold>,<command>)

**Response:** +ADCAT: <mode>,<dir>,<threshold>,<command>

#### Defined Values:

<mode> is the configuration mode:

- 0 disable analog triggered AT command,
- 1 enable analog triggered AT command,
- 2 configure analog triggered AT command parameters.

<dir> is the triggering condition:

- 0 configure as low-to-high condition,
- 1 configure as high-to-low condition.

<threshold> is the time required, after the condition is reached, before triggering the AT command. Unit is hundred of millisecond from 0 to 50.

<cmd> is the AT command to be executed when the condition and threshold are met. Maximum length of the AT command is 128 characters.

#### Example:

| Command                         | Response  |
|---------------------------------|---|
| AT+ADCAT=0                      | OK<br>Note: disable analog triggered AT command.  |
| AT+ADCAT=1                      | OK<br>Note: enable analog triggered AT command.   |
| AT+ADCAT?                       | +ADCAT: 1,1,10,""<br>OK   |
| AT+ADCAT=2,1,10,"AT+IPR=115200" | OK<br>Note: set analog triggered AT command parameters to trigger the specified AT command after 1 second from low-to-high. |
| AT+ADCAT=?                      | +ADCAT: (0-2),(0-1),(1-50),(128)<br>OK  |

#### Note:

- The analog port is limited to 5V maximum.
- Use only cable/metal contact designed for Molex MicroFit connector.
- The application will NOT check the command <cmd> entered. It will execute the command even if the command is invalid.
- When triggered, the command will not output any response to the external serial port.
- Do not enter "interactive" command (i.e +CMGS, +WDWL,...), otherwise the application will be stuck waiting for user input.
- If +ADCAT is enable, no other AT command can control the analog port.

## 13.3 Editing high and low analog levels

### AT+ADCATLMT

To set high and low limit of Analog triggered AT command. These two values will be "synchronized" with the HL and LL of the AI Command String service (see Chapter 21.9). Editing these values will at the same time change the corresponding Command String values.

**Syntax:** AT+ADCATLMT=<lowLimit>,<highLimit>

**Response:** +ADCATLMT: <lowLimit>,<highLimit>

#### Defined Values:

<lowLimit> low limit of Analog voltage, unit is mV. Range from 0 to 5000, default value is 1000.

<highLimit> high limit of Analog voltage, unit is mV. Range from 0 to 5000, default value is 2500.

#### Example:

| Command            | Response   |
|--------------------|--|
| AT+ADCATLMT=0,1000 | OK<br>Note: set low limit to 0V, and high limit to 1V. |
| AT+ADCATLMT?       | +ADCATLMT: 0,1000<br>OK                                |
| AT+ADCATLMT=?      | +ADCATLMT: (0-5000),(0-5000)<br>OK                     |



# Chapter 14

## Call screening

This feature enables modem to reject incoming call, if the phone number does not match one of the entries of authorized phone number list. Unauthorized incoming call will be hanged up within one ring.

Up to 10 authorized phone numbers can be stored. Each number can be as long as characters Waiting call can also be rejected.

### 14.1 Enabling call screening

#### AT+CSRN

This command is to enable or disable call screening feature.

**Syntax:** AT+CSRN=<mode>

**Response:** +CSRN: <mode>

#### Defined Values:

<mode>

|   |                        |
|---|------------------------|
| 0 | disable call screening |
| 1 | enable call screening  |

#### Example:

| Command   | Response                           |
|-----------|------------------------------------|
| AT+CSRN=0 | OK<br>Note: disable call screening |
| AT+CSRN=1 | OK<br>Note: enable call screening  |
| AT+CSRN?  | +CSRN: 1<br>OK                     |
| AT+CSRN=? | +CSRN: (0-1)<br>OK                 |

#### Note:

- To use call screening make sure caller ID service is enabled otherwise all incoming call will be rejected.
- To apply call screening to waiting call please first enable call waiting indication by command AT+CCWA=1,1.
- Rejected incoming will not be diverted to voice mail.

## 14.2 Authorized phone number list

### AT+CSNW

This command is to enter authorized phone number.

**Syntax:** AT+CSNW=<id>,<num>

**Response:** OK

#### Defined Values:

<id> location of the authorized phone number to be stored. Valid range is from 1 to 10.

<num> authorized phone number. First digit can be "+", others must be numeric digits. Maximum length is 20.

#### Example:

| Command               | Response   |
|-----------------------|--|
| AT+CSNW=1,"12345678"  | OK<br>Note: enter authorized number to location 1.         |
| AT+CSNW=11,"12345678" | +CME ERROR: 3<br>Note: location out of range.              |
| AT+CSNW=3,"1qaaa"     | +CME ERROR: 3<br>Note: non-numeric characters not allowed. |
| AT+CSNW=?             | +CSRN: (1-10),(20)<br>OK                                   |

#### Note:

- Enter phone number exactly same as the incoming one, especially if entering International phone number. Use AT+CLIP command to check incoming call number first.
- Enter empty phone number in the <num> field will erase the record of that location.

## 14.3 Reading authorized phone number list

### AT+CSNR

This command is to read authorized phone number entered.

**Syntax:** AT+CSNR=<id1>(<id2>)

**Response:** +CSNR: <id>,<num>

#### Defined Values:

<id1> beginning location of the authorized phone number to be read. Valid range is from 1 to 10.

<id2> ending location of the authorized phone number to be read. Valid range is from 1 to 10.

**Example:**

| Command     | Response   |
|-------------|--|
| AT+CSNR=1   | +CSNR: 1,"12345678"<br>OK<br>Note: display authorized number in location 1.  |
| AT+CSNR=1,8 | +CSNR: 1,"12345678"<br>+CSNR: 3,"12345678"<br>+CSNR: 6,"12345678"<br>+CSNR: 8,"12345678"<br>OK<br>Note: display authorized number in from location 1 to 8. |
| AT+CSNR=?   | +CSNR: (1-10)[,(1-10)]<br>OK   |

## 14.4 Erasing authorized phone number list

### AT+CSND

This command is to erase authorized phone number entered.

**Syntax:** AT+CSND=<id1>(<id2>)

**Response:** +CSNR: <id>,<num>....

#### Defined Values:

<id1> beginning location of the authorized phone number to be erased. Valid range is from 1 to 10.

<id2> ending location of the authorized phone number to be erased. Valid range is from 1 to 10.

**Example:**

| Command     | Response   |
|-------------|--|
| AT+CSND=1   | OK<br>Note: erase authorized number in location 1.           |
| AT+CSND=1,8 | OK<br>Note: erase authorized number in from location 1 to 8. |
| AT+CSND=?   | +CSND=(1-10)[,(1-10)]<br>OK                                  |



# Chapter 15

## Modem status check and monitoring

The modem status check and monitoring feature can check the status of the modem in either "one shot" or periodic mode. Modem will also report checked result by SMS, if the result is beyond preset limit, and reset automatically if losing network connection.

Following items will be checked:

- network registration (periodic mode only, triggering reset),
- ROM test,
- signal strength (can trigger reporting),
- IP address of modem (only when cellular connection activated).

### 15.1 Modem status check and monitoring

#### AT+TMODE

This command is to perform and setup modem status check and monitoring feature.

**Syntax:** AT+TMODE (= <mode> (<para>))

**Response:** +TMODE: <test1>,<test2> . . .

#### Defined Values:

<mode>

- 0            disable periodic mode check
- 1            enable periodic mode check
- 2            to set the number in <para> field as telephone number for periodic mode check reporting.
- 3            to set the number in <para> field as network signal trigger level for periodic mode check reporting. Range from 1-31.
- 4            to set the <para> field as input voltage trigger level for remote reporting. Range 0-5000.

#### Example:

| Command    | Response   |
|------------|--|
| AT+TMODE   | +TMODE: 1,15,"10.111.222.33",3814<br>OK<br>Note : execute status check ("one shot" mode) |
| AT+TMODE=? | +TMODE: (0-4),(20)<br>OK   |
| AT+TMODE?  | +TMODE: 1,"1234567",10,3500<br>OK<br>Note: display current setting                       |

| Command            | Response  |
|--------------------|---|
| AT+TMODE=0         | OK<br>Note: disable periodic mode check                           |
| AT+TMODE=1         | OK<br>Note: enable periodic mode check                            |
| AT+TMODE=2,1234567 | OK<br>Note: set telephone number for periodic mode reporting      |
| AT+TMODE=3,10      | OK<br>Note: set network signal trigger level for remote reporting |
| AT+TMODE=4,3450    | OK<br>Note: set input voltage trigger level for remote reporting  |

**Note:**

- In case of the M1003G or M100CDMAplus the hardware doesn't support the "input voltage" reading, and it will always respond with 0.

## 15.2 Operation of modem status check and monitoring

### "One Shot" mode

When user enters AT+TMODE command the modem will perform a single check and will send back the result like this, see more details in the Table 15.2: *+TMODE: 1,15,"10.111.222.33",3814*

| Check item              | Result field # | Result  | Remark  |
|-------------------------|----------------|---|---|
| ROM data check sum      | 1              | 0 fail<br>1 pass                                    |   |
| Network signal strength | 2              | Range from 1-32 (or 99)                             | Same as AT+CSQ                                |
| Modem IP address        | 3              | In xxx.xxx.xxx.xxx format                           | Only shown when cellular session is activated |
| Input voltage           | 4              | Voltage to the modem's internal module (times 1000) | Not for end customer use.                     |

Table 15.2: "One shot" TMODE details

### "Periodic" mode

When user enters AT+TMODE=1 command the modem will perform periodic check every minute:

1. it will check if the modem is registered to the network; if the modem is not registered to the network it will increase a counter by one. If the counter reach 5 (i.e. not registered for consecutive 5 minutes) the modem will reset.
2. if the modem is registered to the network, the counter will be reset to 0 and perform check same as "one shot" mode.

3. if the result of the network signal strength is lower than the setting of AT+TMODE=3,x the test result will be sent over SMS to the telephone number set by AT+TMODE=2,xxxxxxx (max number of digit is 20).
4. if the result of the input voltage is lower than the setting of AT+TMODE=4,x the test result will be sent over SMS to the telephone number set by AT+TMODE=2,xxxxxxx.
5. if 3 consecutive check failed (i.e. 3 SMS sent) then the periodic mode check will be disable automatically.



# Chapter 16

## Automatic PIN entry

The automatic PIN entry feature lets user to save a PIN code into the modem. When the modem detects a PIN (PIN1) enabled SIM on starting, it will use the saved PIN code to unlock it. To prevent further PIN blocking user can set minimum PIN remaining attempt number as a prerequisite for the automatic PIN entry operation.

### 16.1 Automatic PIN entry

#### AT+AUTOPIN

This command is to configure and enable/disable automatic PIN Entry feature

**Syntax:** AT+AUTOPIN=<mode> [,<pin>,<remain>,<unso>]

**Response:** +AUTOPIN: <mode>,<pin>,<remain>,<unso>

#### Defined Values:

<mode> default value is 0.

0 disable automatic PIN entry.

1 enable automatic PIN entry.

2 configure parameters.

<pin> four digit PIN code for automatic PIN entry. Default value is "0000".

<remain> minimum value of PIN remaining attempt number. If PIN remaining attempt number is less than the value of <remain>, automatic PIN entry will not operate. Valid value is 1 to 3. Default value is 3.

<unso> default value is 0.

0 no unsolicited message.

1 unsolicited message +AUTOPIN: <pin\_remain> will be displayed if <remain> is larger than PIN remaining attempt number.

**Example:**

| Command  | Response  |
|--|---|
| AT+AUTOPIN=1                                       | OK<br>Note: enable automatic PIN entry.   |
| AT+AUTOPIN=0                                       | OK<br>Note: disable automatic PIN entry.  |
| AT+AUTOPIN?  | +AUTOPIN: 1,"1234",3,0<br>OK<br>Note: display current setting.  |
| AT+AUTOPIN=?                                       | +AUTOPIN: (0-2),(4),(1-3),(0-1)<br>OK   |
| AT+AUTOPIN=2,"8888",3,0                            | OK<br>Note: set saved PIN as "8888", PIN remaining attempt number as 3, disable unsolicited message.  |
| AT+AUTOPIN=1<br>AT+AUTOPIN=2,,2,1<br><br>AT+CFUN=1 | OK<br>OK<br>Note: enable automatic PIN entry and unsolicited message and set PIN remaining attempt number to 2.<br>OK<br>+AUTOPIN: 1<br>Note: after reset PIN remaining attempt number is 1, automatic PIN entry aborted and display unsolicited message. |

**Note:**

- Be VERY careful on using this feature as normally a SIM card has only a maximum of 3 PIN entry attempts. Further incorrect attempt will lead to the card become SIM locked and need PUK to unlocked it.
- This feature is only for SIM card that is PIN1 enabled. It will not work for PIN2 or PUK locked SIM card.
- The automatic PIN entry operation will be performed only after power up or restart. Enabling AUTOPIN after power up will not make it operate immediately.
- The AT+AUTOPIN command cannot be entered remotely (SMS, TCP Terminal). It can only be operated via serial port.
- The AT+AUTOPIN command is not password protected. Be cautious of saved PIN entry read by other people.

# Chapter 17

## Remote application update

By using this feature, user can download the new version of Maestro modem application from a FTP server and upgrade his modem. By combining remote AT command by SMS feature user can control the modem to complete the application downloading and updating process remotely.

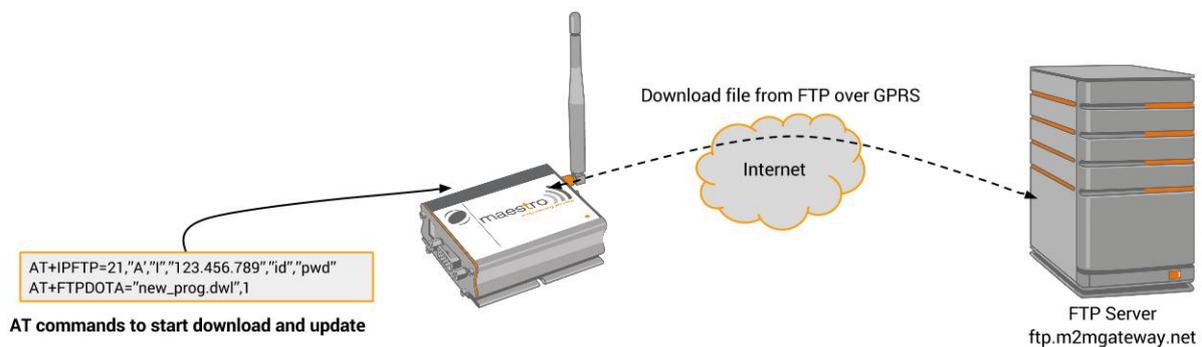


Figure 17.0.1: Remote application update example

To perform the whole application update process, several AT commands have to be sent:

1. AT+IPGPRS to set network parameters (APN),
2. AT+IPFTP to set FTP server parameters (name, user id, password),
3. AT+FTPDOTA to set file name and FTP path and start downloading\*,
4. AT+ADINSTALL to install the downloaded new application\*.

\*Note: by adding one extra parameter after step 3 complete, step 4 will be executed automatically. See following sections for details.

### 17.1 FTP server

#### AT+IPFTP

This command is to set FTP server parameters.

**Syntax:** AT+IPFTP =<port>,<type>,<mode>,<server>,<id>,<pwd>

**Response:** +IPFTP: <port>,<type>,<mode>,<server>,<id>,<pwd>

#### Defined Values:

<port> port number of the FTP server. Default value is 21.

- <type> translation of carriage return, valid values are:
  - I image (no translation, default),
  - A ASCII,
  - E EBCDIC.
  
- <mode> passive or active mode valid values are:
  - P passive (default),
  - A active.
  
- <server> IP address of FTP server (in xxx.xxx.xxx.xxx format) or an alpha numeric string format (e.g. ftp.server.com). Maximum 120 characters.  
 Note: if alpha numeric string format is used, make sure the cellular network has proper DNS service available.
  
- <id> login name of the user. Maximum 64 characters.
  
- <pwd> password for the user. Maximum 64 characters.

**Example:**

| Command  | Response  |
|--|---|
| AT+IPFTP= 21,"I","A","201.123.222.222","user-id","pwd" | OK<br>Note : setup FTP parameter.                                   |
| AT+IPFTP=?   | +IPFTP: (0-65535),<br>("A","I","E"),("P","A"),(120),(64),(64)<br>OK |
| AT+IPFTP?  | +IPFTP:<br>21,"I","A","201.222.222.222","user-id","pwd"<br>OK       |

## 17.2 Starting remote application download

### AT+FTPDOTA

This command is to inform the modem the file name and FTP path. The modem will login to the FTP server; download the update file, and optionally execute the update process.

**Syntax:** AT+FTPDOTA =<filename>[,<path>],[,<update>]

**Response:**

```
+FTPDOTA : 0,<filename>,<filesize>
+FTPDOTA : <result>
+ADINSTALL : <adinstall result>
```

**Defined Values:**

- <filename> file name of the file to be downloaded. Maximum 128 characters.
  
- <path> path (directory) name where the file is placed. Maximum 128 characters. If <path> is omitted, program will try to download from FTP's root (entry) directory.
  
- <update> if a third parameter '1' is entered, the program will execute the AT+ADINSTALL command if the download process is successful. This is useful for sending update commands over SMS, so that one SMS is saved in this case. See next section for the details of AT+ADINSTALL command.
  
- <result> result code of the downloading process:

- 0 download successful,
- 1 SIM card problem (check SIM card and PIN),
- 2 internal memory problem (try reset modem),
- 3 FTP connection fail (check network signal, check FTP status, check FTP address),
- 4 reserved,
- 5 download file size not same as FTP reported (retry downloading),
- 6 not enough space for downloading (contact Maestro Wireless),
- 7 file format incorrect (check file for downloading),
- 8 error writing flash (contact Maestro Wireless),
- 4xx-5xx FTP protocol return code (check FTP document (RFC 959) for explanation).

**Example:**

| Command                          | Response  |
|----------------------------------|---|
| AT+FTPDOTA="update.dwl"          | +FTPDOTA: 0,update.dwl,17000<br>OK<br>Note: download "update.dwl" file from FTP root directory, file size is 17000 bytes.   |
| AT+FTPDOTA="update1.dwl","sub"   | +FTPDOTA: 0,update.dwl,17001<br>OK<br>Note: download "update1.dwl" file from FTP "sub" directory, file size is 17001 bytes.                                       |
| AT+FTPDOTA="update1.dwl","sub",1 | +ADINSTALL: 2<br>M1003G_SmartPack_v22_SL8082T_R752_050316<br>Note: download "update1.dwl" file from FTP "sub" directory, and perform program update successfully. |
| AT+FTPDOTA?                      | +FTPDOTA: update.dwl, 17001<br>OK<br>Note: check downloaded file ready for update.  |
| AT+FTPDOTA?                      | +FTPDOTA: OK<br>Note: no downloaded file.   |
| AT+FTPDOTA="update1.dwl"         | +FTPDOTA: -3<br>OK<br>Note: error on downloading file (FTP open fail).  |
| AT+FTPDOTA=?                     | +FTPDOTA: (128)[,(128)]<br>OK   |

## 17.3 Installing new application

### AT+ADINSTALL

This command performs the program update process. File downloaded by AT+FTPDOTA command will replace the existing modem application. Modem will restart and then result and version will be displayed.

**Syntax:** AT+ADINSTALL

**Response:** +ADINSTALL: <result>,<ver>

#### Defined Values:

<result> if other result code please contact Maestro Wireless Solutions:

- 2 update process successful,

3 update process unsuccessful (original program will be loaded back).

<ver> version number of existing running SmartPack.

**Example:**

| Command      | Response  |
|--------------|---|
| AT+ADINSTALL | +ADINSTALL:<br>2,M1003G_SmartPack_v22_SL8082T_R752_050316<br>Note: update successful, show existing program version.    |
| AT+ADINSTALL | +ADINSTALL:<br>3,M1003G_SmartPack_v22_SL8082T_R752_050316<br>Note : update unsuccessful, show existing program version. |
| AT+ADINSTALL | +CME ERROR: 3<br>Note: update unsuccessful, no update file available.   |

### 17.4 Notes and cautions to be taken

- This feature is ONLY for updating new SmartPack application on the modem. Do not use it for downloading other things. Always contact Maestro Wireless or distributor for correct update file and information.
- If you want to perform update for modem at remote site by AT command over SMS, make sure the feature is enabled by command AT+SMSAT=1 is entered.
- Make sure you have setup cellular settings by AT+IPGPRS command. When entering AT+FTPDOTA command the program will make cellular connection automatically if not connected before.
- It is recommended to stop other SmartPack such as Auto TCP/UDP connection during program downloading and updating.
- Depending on the file size and network condition the download time could be a few minutes up to 30 minutes. Be patient to wait for response after entering AT+FTPDOTA command.
- Do not use "~" character on file path because it cannot be transferred correctly over SMS.
- No resume function on FTP downloading. The whole file has to be downloaded at one time otherwise the downloaded data will be discarded.

# Chapter 18

## Serial to IP mode and Modbus configuration

### 18.1 Serial to IP mode selection

#### AT+MODESELECT

**Syntax:** AT+MODESELECT=<mode>

**Response:** OK

#### Defined Values:

<mode>

- 1 Transparent mode. Default mode.
- 2 Converter mode from Modbus serial (ASCII or RTU) to ModbusTCP.
- 3 reserved for future use
- 4 reserved for future use

#### Example:

| Command         | Response                     |
|-----------------|------------------------------|
| AT+MODESELECT=1 | OK<br>Note: default settings |
| AT+MODESELECT=? | +MODESELECT: (1-4)<br>OK     |

#### Note:

- For mode 2, the modbus serial configuration needs to be set with the +MODBUSCFG
- For mode 2, the TCP port set for the Modbus Master to connect is the port 502 (non-configurable).

### 18.2 Modbus serial configuration

To set the serial configuration of the Modbus polling commands.

Serial port setting will be set according to the following only when querying Modbus data. After query it will go back to original setting (e.g. 115200 , 8N1).

#### AT+MODBUSCFG

**Syntax:** AT+MODBUSCFG=<mbmode>,<brate>,<frame>

**Response:** OK

**Defined Values:**

<mbmode> modbus serial type:

- 0 Modbus RTU mode (default)
- 1 Modbus ASCII

<brate> baud rate of serial port (bps): 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 56000, 57600, 115200 (default)

<frame> character framing setting of serial port:

- "8N1" 8 data bits, parity none, 1 stop bit (default)
- "8O1" 8 data bits, parity odd, 1 stop bit
- "8E1" 8 data bits, parity even, 1 stop bit
- "8N2" 8 data bits, parity none, 2 stop bits
- "7N1" 7 data bits, parity none, 1 stop bit
- "7O1" 7 data bits, parity odd, 1 stop bit
- "7E1" 7 data bits, parity even, 1 stop bit
- "7N2" 7 data bits, parity none, 2 stop bits

**Example:**

| Command                   | Response   |
|---------------------------|--|
| AT+MODBUSCFG?             | +MODBUSCFG: 0,115200,"8N1"<br>OK<br>Note: default settings.  |
| AT+MODBUSCFG=1,9600,"8E1" | OK<br>Note: change the serial settings to ASCII, 9600 baudrate, 8 data bits, parity even, 1 stop bit |

### 18.3 Examples

Setup the M100 to act as a ModbusTCP to ModbusRTU converter:

1. Select Modbus converter mode: AT+MODESELECT=2
2. Connect to Internet the usual way.
  - (a) Set APN: AT+IPGPRS=1,<APN>
  - (b) Connect to Internet: AT+IPCONNECT=1,1
  - (c) Verify your gateway public IP address: AT+CGPADDR=1
3. Configure the properties of the bus (serial side): AT+MODBUSCFG=0,9600,"8N1"

Modbus Master server will reach the modem on its public IP address directly using the default 502 TCP port. Once ModbusTCP frame are received from the Modbus Master server, the M100 will convert the frame to ModbusRTU and send it to the serial device, get the response, and convert it back to ModbusTCP to the server.

# Chapter 19

## Command string - Introduction

"Command String" is a set of programmable scripts for Maestro modem. User can input sets of Command String to control various kinds of "Service". Unlike AT command, Command String can be stored inside modem and can be executed upon output of certain services.

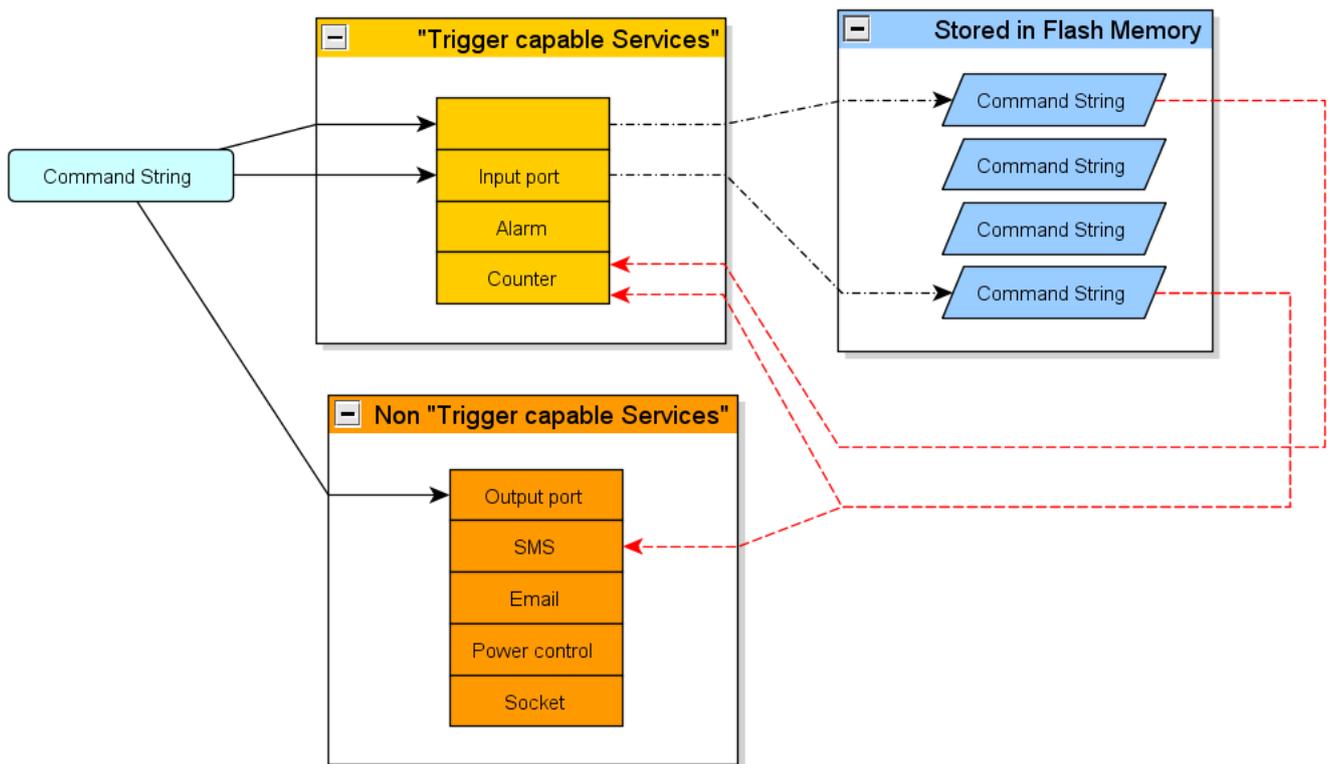


Figure 19.0.1: Command String service concept

"Command String" and "Service" operation mechanism:

1. Use AT command to enter preset Command String.
2. Command strings can be executed upon power up or directly by AT commands.
3. Executed Command String will drive some Services to be done (e.g. sending SMS or setting output pins).
4. Executed Command String can also configure and control some Services that have "trigger" capability.
5. These Services, when a certain predefined condition is matched (e.g. timer reach zero) can "trigger" a stored Command String.
6. Execute stored Command String to control Services again.

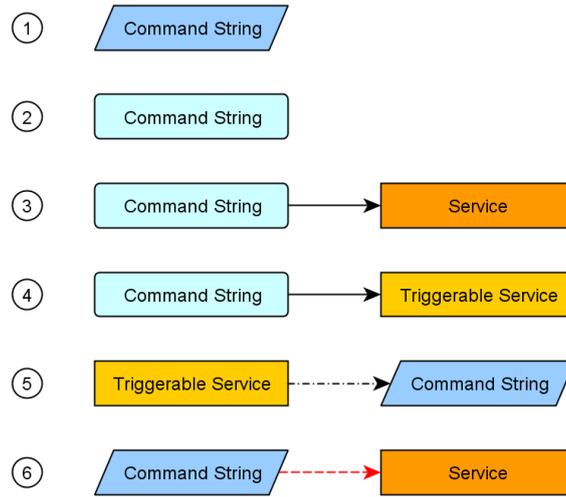



Figure 19.0.2: Command String operation mechanism

# Chapter 20

## Command string - How to use ?

### 20.1 Command string format

A single Command String is a text string composed with four fields, for example:

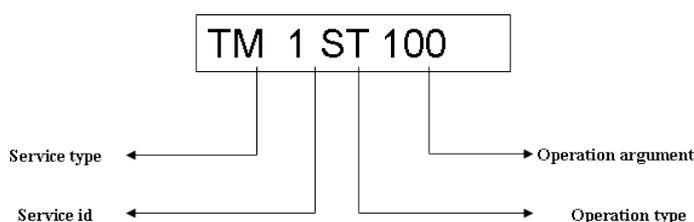

Each field is separated by a space (ASCII value 32).

#### 20.1.1 Service type

The Service field is two capital characters indicating the type of Service to be chosen, please refer to the Table 20.2 for details.

| Field entry | AL    | CT      | TM        | IP    | OP     | SM   | EM    | PS    | AI <sup>1</sup> | SC     |
|-------------|-------|---------|-----------|-------|--------|------|-------|-------|-----------------|--------|
| Service     | alarm | counter | countdown | input | output | SMS  | email | power | analog          | socket |
| See section | 21.1  | 21.2    | 21.3      | 21.4  | 21.5   | 21.6 | 21.7  | 21.8  | 21.9            | 21.10  |

Table 20.2: Service type list

#### 20.1.2 Service id

Each type of Service there has more than one unit; e.g. there are 10 counters available so the id range is 1 to 10.

#### 20.1.3 Operation type and Operation argument

For each type of Service there are few kinds of operations; e.g. "TM 1 ST 100" means to set the value or countdown timer #1 to 100 seconds. See further chapters for the explanation of each service.

### 20.2 Concatenating Command String

You can concatenate Command String update 128 bytes long totally (including space). They will be executed sequentially. However, if one Command String is incorrect or invalid execution will be stopped and successive Command String will not be executed.

For example:

TM\_1\_ST\_100\_TM\_1\_TR\_99\_TM\_1\_SW\_1

- First String "TM 1 ST 100" will be executed.
- Second String "TM 1 TR 99" will not be executed because "99" is out of range.
- Third String "TM 1 SW 1" is correct but will not be executed because execution is stopped on second string.

## 20.3 Executing a Command String

### AT+CSTR

This command is used to execute a Command String directly linked to a specific service.

**Syntax:** AT+CSTR=<string>

**Response:** OK

**Defined Values:**

<string> Command String.

**Example:**

| Command                         | Response  |
|---------------------------------|---|
| AT+ CSTR="TM 1 ST 3"            | OK<br>Note: entire Command String executed successfully.      |
| AT+ CSTR="TM 1 ST 3 TM 30 ST 4" | +CME ERROR: 3<br>Note: one Command String cannot be executed. |

**Note:**

- When there is error in between concatenated Command String +CME ERROR: 3 will be returned.

## 20.4 Editing a stored Command String

### AT+CSTRSET

This command is used to store, read and delete Command String. It can also used to execute stored Command String.

**Syntax:** AT+CSTRSET= <oper>,<id>[,<string>]

**Response:** +CSTRSET: <type>pin

**Defined Values: OK**

<oper> define type of operation:

|   |                                  |
|---|----------------------------------|
| 0 | store Command String to flash,   |
| 1 | read Command String from flash,  |
| 2 | erase Command String from flash, |

3 execute Command String stored in flash.

<id> Identification number (id) of the Command String. Valid value is 1 to 50, and 80; i.e. up to 51 Command Strings can be stored. Command String with id = 80 will be executed on boot when modem power up.

<string> Command String.

**Example:**

| Command                      | Response  |
|------------------------------|---|
| AT+ CSTRSET=0,1,"TM 1 ST 3"  | OK<br>Note: store Command String with id = 1.                     |
| AT+ CSTRSET=0,99,"TM 1 ST 3" | +CME ERROR: 3<br>Note: id out of range.                           |
| AT+CSTRSET=1,1               | +CSTRSET: 1, "TM1 ST 3"<br>Note: read stored Command String id 1. |
| AT+CSTRSET=3,1               | OK<br>Note: execute stored Command String id 1.                   |
| AT+CSTRSET=2,1               | OK<br>Note: erase Command String id 1 from flash memory.          |
| AT+CSTRSET=3,1               | +CME ERROR: 3<br>Note: id 1 is empty.                             |
| AT+CSTRSET=?                 | +CSTRSET: (0-3),(1-50,START_CS_ID),(20) <br>OK                    |

**Note:**

- Each Command String is limited to 128 bytes.
- The program will NOT check if the input Command String is valid or not.



# Chapter 21

## Command string - Services - Syntax and explanation

"Service" is a kind of function or tool that can be used by Command String. There are two kinds of services:

- **Trigger capable:**  
When a certain predefined condition is matched (e.g. timer reach zero) "trigger" a stored Command String. These services include: alarm, counter, input port, and countdown timer.
- **Non-Trigger capable:**  
Can only perform job when called by Command String. These Services include: output port, SMS.

### 21.1 Alarm Service

Alarm is used to execute a Command String when the real-time clock of the Maestro modem meets the set time of the alarm.

To use an alarm, it is required to set the real-time clock of the modem properly, see AT+CCLK in AT command manual. Maximum of alarms which can be used is 5.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation  |
|---------------------------|-------------------------|-----------------------------|---------------------------------|--|
| AL                        | (1 to 5)                | ST                          | 09/10/10,12:00:00               | Set alarm date/time yy/mm/dd,hh:mm:ss format         |
|                           |                         | ST                          | 0                               | Cancel preset  |
|                           |                         | TR                          | (1 to 50)<br>0                  | Set Command String to be run,<br>0 to cancel setting |

**Example:** Set alarm #1 to execute Command String #20 at 01OCT2008,01:00:00.

```
AL_1_TR_1_AL_1_ST_08/10/01,01:00:00
```

**Example:** Cancel #1 Alarm setting.

```
AL_1_ST_0
```

**Example:** Cancel #1 Alarm executing Command String.

```
AL_1_TR_0
```

**Note:**

- The Alarm date time input MUST to fulfill the following requirements:
  - In yy/mm/dd,hh:mm:ss format, program will also check if input date/time is valid or not.
  - At least 4 minutes later than current modem's real-time clock time (check by AT+CCLK command).

- Do not concatenate after ST operation; set time operation should be at the last part of Command String.
- After alarm time, the ST setting of that Alarm will be lost.
- This service will make use of Maestro modem internal alarm command (AT+CALA) so please avoid using AT+CALA command by yourself when alarm service is used.
- If the modem is restarted, date time setting of each alarm will be checked against real-time clock time. If time is passed the setting will be canceled.
- Alarm Service is "one-shot" type. There is no periodic alarm like "daily" or "weekly".
- If the alarm time needs to be updated, please disable the alarm and set it again to a new time.

## 21.2 Counter Service

Counter is used to execute a Command String when a counter value equals a preset value. There are total of 5 counters.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation  |
|---------------------------|-------------------------|-----------------------------|---------------------------------|--|
| CT                        | (1 to 5)                | DE                          | 1 to 255                        | Decrement the value of counter with argument value                             |
|                           |                         | IN                          | 1 to 255                        | Increment the value of counter with argument value                             |
|                           |                         | RS                          | 0                               | Reset the counter value to zero  |
|                           |                         | ST                          | -32768 to 3767                  | Set the "trigger" value; If counter value equal this value, it will execute TR |
|                           |                         | TR                          | (1 to 50)<br>0                  | Set Command String to be run,<br>0 to cancel setting                           |

**Example:** Set counter #1 to execute Command String #10 if counter value equals 100.

CT\_1\_ST\_100\_CT\_1\_TR\_10

**Example:** Increase counter #1 value by 20.

CT\_1\_IN\_20

**Example:** Reset counter #1 value to 0.

CT\_1\_RS\_0

**Note:**

- Initial Counter and trigger values are zero.
- The Counter is recorded by a signed 16 bit register, if the Counter value is 32767 and you increase it by 1, the value will change to -32768.
- There is no limit on no. of times of triggering. E.g. If you first set trigger value to 2 and reset Counter to 0, then you increment counter by 2, then decrement by 2 and increment by 2 again. Then the associated Command String will be executed twice.

## 21.3 Countdown Timer Service

Countdown timer is used execute a Command String when the timer value reach zero. Counting period is 1 second. There are total of 10 Countdown Timers.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation  |
|---------------------------|-------------------------|-----------------------------|---------------------------------|--|
| TM                        | (1 to 10)               | ST                          | 1 to 2147483647                 | Initial value of Countdown Timer (in seconds)        |
|                           |                         | SW                          | 0 to 1                          | Start (1) or Stop (0) Timer                          |
|                           |                         | TR                          | (1 to 50)<br>0                  | Set Command String to be run,<br>0 to cancel setting |

**Example:** Set countdown timer #1 to execute Command String #10 and start 600 seconds countdown.

TM\_1\_ST\_600\_TM\_1\_SW\_1\_TM\_1\_TR\_10

**Example:** Stop countdown timer #1.

TM\_1\_SW\_0

**Example:** Cancel countdown timer #1 to trigger Command String.

TM\_1\_TR\_0

**Note:**

- When the countdown timer expires (reach 0) it will stop automatically (SW 0).
- If two or more timers expire at the same timer, timer with smaller id has higher priority, i.e. Command String related to that timer will be executed first.
- These are not precision timers, if the modem is busy (e.g. with network communication). The execution time may be delayed.

## 21.4 Input Port Service

Input port Service can use the signal of I/O board's input ports to control the execution of Command String.

You can control the change of single or multiple input port signals as a condition to trigger Command String execution.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation  |
|---------------------------|-------------------------|-----------------------------|---------------------------------|--|
| IP                        | 1<br>or 2 <sup>1</sup>  | DR                          | 0 to 1                          | Direction of I/P signal change to trigger            |
|                           |                         | TH                          | 1 to 50                         | Duration of the I/P state to trigger, unit in 0.1s   |
|                           |                         | TR                          | (1 to 50)<br>0                  | Set Command String to be run,<br>0 to cancel setting |

**Example:** Configure input port #1 with detection "high to low" and threshold value 0.1s, and trigger Command String #5 if signal condition match.

IP\_1\_DR\_1\_IP\_1\_TH\_1\_IP\_1\_TR\_5

**Example:** Cancel input port#1 to trigger Command String.

### Input Port operation mechanism (single I/P triggering)

The Input Port will give out a high or low signal depending on the input voltage to the port.

The Command String can check the change of Input port Signal (operation "DR"):

- Detect a low-to-high input voltage change:

```
IP_1_DR_0
```

- Detect a high-to-low input voltage change:

```
IP_1_DR_1
```

To prevent transient noise signal, a threshold value can be set (operation "TH"). This is the time period required for the detected state to trigger Command String execution. Unit is in tenth of second. Valid value from 1 to 50 (0.1 sec to 5 sec).

**Example:** Threshold value is 1 sec:

```
TH_10
```

**Example:** When set as low-to-high triggering and threshold 1 second:

```
IP_1_DR_0 IP_1_TH_10 IP_1_TR_5
```



Figure 21.4.1: When T=1second the Command String #5 will be executed

E.g. when set as high-to-low triggering and threshold 1 sec IP 1 DR 1 IP 1 TH 10 IP 1 TR 5

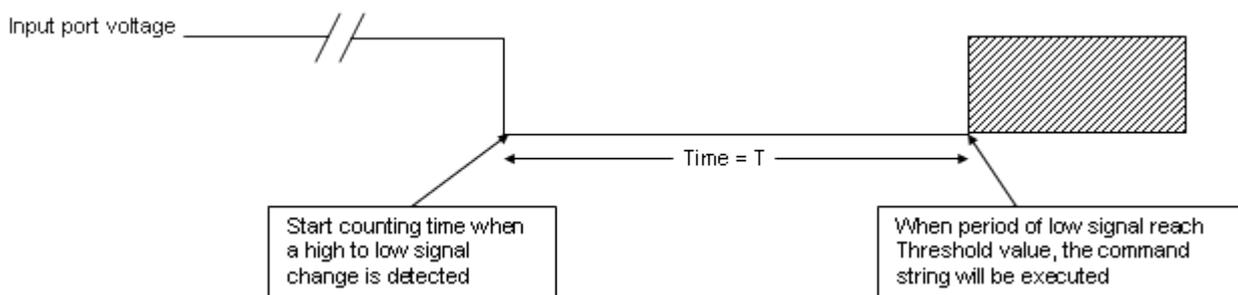


Figure 21.4.2: When T=1second the Command String #5 will be executed

## 21.5 Output Port Service

Output port Service can control the state of the output pin of I/O ports Command String.

You can control the change of single or multiple input port signals as a condition to trigger Command String execution.

| 1st field<br>Service<br>type | 2nd field<br>Service<br>id | 3rd field<br>Operation<br>type | 4th field<br>Operation argument | Explanation             |
|------------------------------|----------------------------|--------------------------------|---------------------------------|-------------------------|
| OP                           | 1                          | SW                             | 0 to 1                          | State of the output pin |

**Example:** Set the output pin of I/O port #1 to "ON" (1)  
or 2<sup>2</sup>

OP\_1\_SW\_1

## 21.6 SMS Service

This service is used to send out a SMS to phone number recorded in the first 10 phone book records in SIM card.

| 1st field<br>Service<br>type | 2nd field<br>Service<br>id | 3rd field<br>Operation<br>type | 4th field<br>Operation argument          | Explanation                                       |
|------------------------------|----------------------------|--------------------------------|--|---|
| SM                           | (1 to 10)                  | SN                             | (SMS content)                            | Send out the SMS to phone number inside SIM card  |
|                              |                            |                                | %CTn<br>%IP<br>%OP<br>%TMn<br>%AI<br>%PC | "%" to indicate "variable" options in SMS content |

**Example:** Send a message "ALERT" to phone number store in SIM phone book #1.

SM\_1\_SN\_ALERT

**Example:** Send a message "Counter#2\_value\_is\_20" to phone number store in SIM phone book #1.

SM\_1\_SN\_Counter#2\_value\_is\_%CT2

### Using variable option within SMS content

In the SMS content field you can use "%" and Service type to insert the current value of Service into the SMS content:

| Variable     | %CTn                          | %TMn                        | %IP                               | %OP  | %AI                     | %PC                           |
|--------------|-------------------------------|-----------------------------|-----------------------------------|--|-------------------------|-------------------------------|
| Description  | Current value of counter id#n | Current value of timer id#n | Current I/P ports' summing value  | Current O/P ports' summing value (calculation same as %IP) | Current AI ports values | Current pulse counters values |
| Range of 'n' | 1 to 5                        | 1 to 10                     | (See Chap 18.4.c for calculation) | (See Chap 18.4.c for calculation)                          | See Note below (5)      | See Note below (6)            |

Invalid Service name or Id will be ignored.

**Note:**

1. Due to modem/SIM initialization it is recommended to send SMS 30 seconds after power up.
2. Only send SMS with "normal" characters. If SMS content has character with ASCII value outside the range between 11 and 127, the SMS may not be sent properly.
3. In case of sending SMS failure (e.g. network problem) the program will delay 0.5 second and try to resend the SMS. If the second time retry (i.e. 3 times total) fails this SMS delivery will be aborted.
4. The maximum length of the SMS content is limited by the maximum length of Command String (128 bytes). The more of Command Strings, the less of SMS length.
5. "%AI" is replaced by the 4 AI's value In the format:  
 <ai1>,<ai2>,<ai3>,<ai4>  
 Each ai value is up to 4 decimal places. If AI reading fails values will become "error" instead.
6. "%PC" is replaced by the four pulse counters values In the format:  
 <pc1>,<st1>,<pc2>,<st2>,<pc3>,<st3>,<pc4>,<st4>  
 where <pcx> - pulse counter value of the counter x  
 where <stx> - status of the counter x If pulse counter reading fails values will become "-1,0".

## 21.7 Email Sending Service

This service is used to send out an Email to one or more email saved address, with saved email subject and saved plus variable email content. Please read Chapter 8 on page 45 for entering email address, subject and body. Up to 10 set of groups (service type EM, id 1 to 10) can be set with different combinations of "elements": recipient (to, cc, bcc), subject and body.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type              | 4th field<br>Operation argument                       | Explanation   |
|---------------------------|-------------------------|--|---|---|
| EM                        | (1 to 10)               | TO                                       | (0-50)  | id of recipient email address<br>0: no recipient              |
|                           |                         | CC                                       | (0-50)  | id of "cc" recipient email address<br>0: no cc recipient      |
|                           |                         | BC                                       | (0-50)  | id of "bcc" recipient email address<br>0: no bcc recipient    |
|                           |                         | SU                                       | (0-10)  | id of email subject<br>0 : no subject                         |
|                           |                         | BD                                       | (0-3)   | id of email body<br>0: no body                                |
|                           |                         | SN                                       | (additional content)                                  | Send out the email with above setting plus additional content |
|                           |                         | %CTn<br>%IP<br>%OP<br>%TMn<br>%AI<br>%PC | "%" to indicate "variable" options in message content |   |

**Example:** Setting up EM set #1 with elements: recipient #1, cc #3, bcc #4, subject #1, content #2.

EM\_1\_TO\_1\_EM\_1\_CC\_3\_EM\_1\_BC\_4\_EM\_1\_SU\_1\_EM\_1\_BD\_1\_1\_SN\_ALERT

**Example:** Sending email EM set#1 with additional content "HELLO\_WORLD".

EM\_1\_1\_SN\_HELLO\_WORLD\_1\_1\_SN\_ALERT

**Example:** Setting up EM set #2 with elements: recipient bcc #3, no subject and content only "0", and send out immediately.

EM\_2\_2\_BC\_3\_EM\_2\_2\_SN\_0\_1\_1\_SN\_ALERT

**Example:** Send an email EM set #1 with content "Counter#2\_value\_is\_20".

EM\_1\_1\_SN\_Counter#2\_value\_is\_%CT2\_1\_1\_SN\_ALERT

## Using variable option within email content

In the email body field you can use "%" and Service type to insert the current value of Service into the email additional content:

| Variable     | %CTn                          | %TMn                        | %IP                               | %OP  | %AI                     | %PC                           |
|--------------|-------------------------------|-----------------------------|-----------------------------------|--|-------------------------|-------------------------------|
| Description  | Current value of counter id#n | Current value of timer id#n | Current I/P ports' summing value  | Current O/P ports' summing value (calculation same as %IP) | Current AI ports values | Current pulse counters values |
| Range of 'n' | 1 to 5                        | 1 to 10                     | (See Chap 18.4.c for calculation) | (See Chap 18.4.c for calculation)                          | See Note below (5)      | See Note below (6)            |

Invalid Service name or Id will be ignored.

### Note:

- To use Email Sending Service make sure all parameters has been setup properly first: - APN (+IPGPRS) - SMTP server (+IPSMTP) - Sender and recipient address (+EMADDR) - Subject (+EMSUBJ) - Body (+EMBODY) It is strongly suggested you have tested the email sending function by using AT+EMSEND command to send test emails first before using EM Command Sting.
- If Operation argument of TO, CC, BC, SU and BD is set to 0(default), the associated Email set will not contain that element.
- A minimum email contains one recipient (either TO, CC or BC) and one character of additional email content.
- Unlike AT+EMSEND command, sending email use EM service will automatically making cellular connection (+IPCONNECT=1,1).
- In case email sending is unsuccessful due to any reason, the same email will be resent for max 2 more times. If all retries are fail that Email will be aborted.
- When using EM service maximum 10 emails can be put on sending queue, further Email sending requests will be aborted. Buffered email queue is volatile and will be lost If modem Is power off or reset. Also when there is EM service in queue AT+EMSEND command will not be allowed.
- "%AI" is replaced by the 4 AI's value In the format:  
<ai1>,<ai2>,<ai3>,<ai4>  
Each analog input value is up to 4 decimal places. If AI reading fails values will become "error" instead.
- "%PC" is replaced by the four pulse counters values In the format:  
<pc1>,<st1>,<pc2>,<st2>,<pc3>,<st3>,<pc4>,<st4>  
where <pcx> - pulse counter value of the counter x  
where <stx> - status of the counter x If pulse counter reading fails values will become "-1,0".

## 21.8 Device Power Control Service

By using Device Power Control Service user can control on/off state of certain component of the modem, in order to save power consumption. A single Service id field can be set to control four parts of the modem.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation                                   |
|---------------------------|-------------------------|-----------------------------|---------------------------------|---|
| PW                        | (0 to 15)               | 0                           | 0                               | Service Id to decide components' on/off state |

**Example:** Enable low clock mode and disable LED's.

PW\_3\_0\_0

**Example:** Enable low clock mode; disable LED's, disable Serial port and unregistered from network.

PW\_15\_0\_0

The value of Service id is the sum of the values each of which is related to a particular device power control operation:

| Value | Function                                  | Remark                         |
|-------|---|--------------------------------|
| 1     | Turn off LED's                            | except network status LED      |
| 2     | Enable power down mode (W32K mode)        | Same as AT+W32K=1 command      |
| 4     | Unregistered from network ("Flight mode") | Same as AT+COPS=2 command      |
| 5     | Turn off Serial port                      | COM port will not get any data |

The larger the id value of PW, the more power saving of the modem. For example user can set e.g. the modem to register to network only once per day, sending out SMS, then unregistered.

**Note:**

- BE VERY CAREFUL to use with id #8 (Turn off Serial port). This will make modem Com port switched off and cannot accept AT command. NEVER program the modem to enable this once power up.
- Although "Operation type" and "Operation argument" fields are ignored, "dummy" entries are needed for consistent Command String Syntax. Use may write "PW" Command String like this ("0" as dummy entry):

PW\_15\_0\_0

- Refer to AT command manual for the details of power down (W32K) mode.
- It is recommended to use "PW" service some time after power on. So user can have time to change setting.
- Each time when "PW" Command String is executed. Refer to AT command manual for the details of power down (W32K) mode.
- Refer to AT command manual for the details of power down (W32K) mode.
- This device power control setting is not saved by itself, so each time when power on the status should be 0 (without any "PW" Command String executed).

## 21.9 Analog input Service

Analog input Service can use the signal of analog input to control the execution of Command String.

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation  |
|---------------------------|-------------------------|-----------------------------|---------------------------------|--|
| AI                        | 1 to 4                  | TP                          | 1 to 3                          | Trigger type of AI value change to trigger           |
|                           |                         | TH                          | 1 to 255                        | Duration of the AI state to trigger, unit in 1s      |
|                           |                         | HL                          | -6000 to 6000                   | High limit of AI to trigger (units mA or mV)         |
|                           |                         | LL                          | -6000 to 6000                   | Low limit of AI to trigger (unit: mA or mV)          |
|                           |                         | TR                          | (1 to 50)<br>0                  | Set Command String to be run,<br>0 to cancel setting |

**Example:** Configure AI#1 trigger condition that value is either higher than the high limit (3000) or lower than low limit (1000) and threshold value 1s, and trigger Command String #5 if signal condition match.

AI\_1\_TP\_3\_AI\_1\_TH\_1\_AI\_1\_HL\_3000\_AI\_1\_LL\_1000\_AI\_1\_TR\_5

**Example:** Configure AI#3 trigger condition that value is higher than the high limit (1000) threshold value 2s, and trigger Command String #1 if signal condition match.

AI\_3\_TP\_1\_AI\_3\_TH\_2\_AI\_3\_HL\_1000\_AI\_3\_TR\_2


**Example:** Cancel AI#1 to trigger Command String.

AI\_1\_TR\_0

## Analog input operation mechanism

The Analog Input Service will keep checking the AI once every one second. Depending on Trigger Type (TP) set, the service will trigger executing Command String if condition fulfilled:

| Trigger Type<br>TP | AI value change from lower than to higher than HL value | AI value change from higher than to lower than LL value |
|--------------------|---|---|
| 1                  | Trigger   | -   |
| 2                  | -   | Trigger   |
| 3                  | Trigger   | Trigger   |

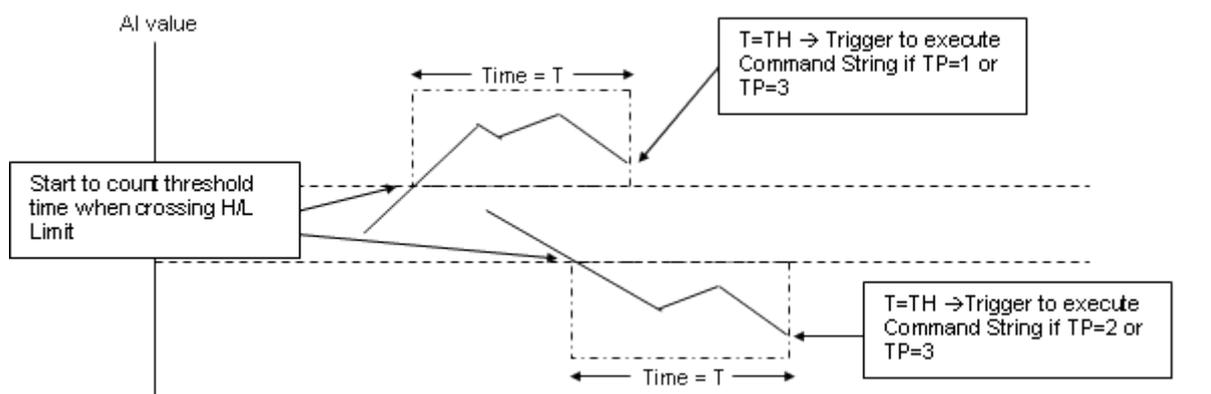

### Note:

- Please read Pulse Counter Plug-in board manual carefully before setup.
- The Service cannot detect AI value change period less than 1s. If the AI value change is less than 1 second this feature will not be able to detect accurately.

## 21.10 Socket Communication Service

This service is used to send out a message Email to one saved TCP host, with saved message content plus variable message. Please read Chapter 9 on page 51 for entering host address and parameters. Up to 10 set of groups (service type SC, id 1 to 10) can be set with different combinations of "elements": host , message content, etc...

| 1st field<br>Service type | 2nd field<br>Service id | 3rd field<br>Operation type | 4th field<br>Operation argument | Explanation   |
|---------------------------|-------------------------|-----------------------------|---------------------------------|---|
| SC                        | (1 to 10)               | TO                          | (1-10)                          | Id of host address (see Section 9.2)                            |
|                           |                         | BD                          | (0-3)                           | Id of email body (see Section 8.5)<br>0: no body                |
|                           |                         | SN                          | (additional content)            | Send out the message with above setting plus additional content |
|                           |                         |                             | %CTn<br>%IP<br>%TMn<br>%AI      | "%" to indicate "variable" options in message content           |

**Example:** Setting up SC set #1 with elements: host #1, content #2.

SC\_1\_TO\_1\_SC\_1\_BD\_1

**Example:** Sending socket communication message SC set#1 with additional content "HELLO\_WORLD".

SC\_1\_SN\_HELLO\_WORLD

**Example:** Setting up SC set #2 with message "0", and send out immediately.

SC\_2\_BD\_0\_SC\_2\_SN\_0

**Example:** Send a message SC #1 "Counter#2\_value\_is\_20" (report counter # value).

SC\_1\_SN\_Counter#2\_value\_is\_%CT2

### Using "variable" options within additional email content

In the SC message additional content field you can use "%" and Service type to insert the current value of Service into the additional content:

| Variable     | %CTn                          | %TMn                        | %IP                               | %AI                     |
|--------------|-------------------------------|-----------------------------|-----------------------------------|-------------------------|
| Description  | Current value of counter id#n | Current value of timer id#n | Current I/P ports' summing value  | Current AI ports values |
| Range of 'n' | 1 to 5                        | 1 to 10                     | (See Chap 18.4.c for calculation) | See Note below (5)      |

Invalid Service name or Id will be ignored.

#### Note:

1. To use Socket Communication Service make sure all parameters has been setup properly first:
  - (a) APN (+IPGPRS)
  - (b) host server (+SCHOSt)

- (c) pre-saved message (+SCMESS) (if needed)
  - (d) It is strongly suggested you have tested the socket communication function by using AT+SCSEND command to send test emails first before using SC Command Sting.r
2. When using SC service maximum 10 messages can be put on sending queue, further message sending requests will be aborted. Buffered message queue is volatile and will be lost if modem is powered off or reset. Also when there is SC service in queue AT+SCSEND command will not be allowed.



# Chapter 22

## Command string - Reading status of one services

### 22.1 Command for reading current information of Services

#### AT+CSTRSTAT

To read current parameter or status of a particular service.

**Syntax:** AT+CSTRSTAT="`<type>` `<id>`"

**Response:** OK

**Defined Values:**

`<type>`      define type of Service:one

|    |                      |
|----|----------------------|
| AL | Alarm                |
| CT | Counter              |
| TM | Countdown timer      |
| IP | Input port           |
| PW | Device power control |
| EM | Email                |
| AI | Analog input         |
| OP | Output port          |

`<id>`      service id

**Example:**

| Command             | Response   |
|---------------------|--|
| AT+CSTRSTAT="AL 1"  | AL 1 : ST 01/01/01,12:00:00 TR 2<br>OK<br>Note: read current setting of Alarm #1 |
| AT+CSTRSTAT="TM 10" | TM 10: CV 66 SW 1 TR 20<br>OK<br>Note: read current info of countdown timer #10  |
| AT+CSTRSTAT="IP 9"  | +CME ERROR: 3<br>Note: id out of range   |

#### 22.1.1 Reading Alarm Service

Enter AT+CSTRSTAT="AL 1" will get Alarm #1 info:

|          |   |                      |          |
|----------|---|----------------------|----------|
| AL 1     | : | ST 01/01/01,12:00:00 | TR 3     |
| <b>a</b> |   | <b>b</b>             | <b>c</b> |

- a. Service id.
- b. Date time set (space if not set).
- c. Command String id to be executed if trigger (0 if not to trigger).

### 22.1.2 Reading Counter Service

Enter AT+CSTRSTAT="CT 1" will get Counter #1 info:

|          |   |          |          |          |
|----------|---|----------|----------|----------|
| CT 1     | : | ST 0     | CV 0     | TR 0     |
| <b>a</b> |   | <b>b</b> | <b>c</b> | <b>d</b> |

- a. Service id.
- b. Counter trigger value.
- c. Current value of the timer.
- d. Command String id to be executed if trigger (0 if not to trigger).

### 22.1.3 Reading Countdown Timer Service

Enter AT+CSTRSTAT="TM 1" will get Countdown Timer #1 info:

|          |   |          |          |          |
|----------|---|----------|----------|----------|
| TM 1     | : | CV 90    | SW 0     | TR 3     |
| <b>a</b> |   | <b>b</b> | <b>c</b> | <b>d</b> |

- a. Service id.
- b. Current value of the timer.
- c. Timer is running (1) or stop (0).
- d. Command String id to be executed if trigger (0 if not to trigger).

### 22.1.4 Reading Input Pin Service

Reading Enter AT+CSTRSTAT="IP 1" will get Input Port #1 info:

|          |   |          |          |          |          |
|----------|---|----------|----------|----------|----------|
| IP 1     | : | MS 1     | DR 0     | TH 5     | TR 3     |
| <b>a</b> |   | <b>b</b> | <b>c</b> | <b>d</b> | <b>e</b> |

- a. Service id.
- b. Mask value (valid for multiple I/P trigger).
- c. Direction of detection.
- d. Threshold value of the detection.
- e. Command String id to be executed if trigger (0 if not to trigger).

### 22.1.5 Reading Device Power Control Service

Enter AT+CSTRSTAT="PW 1" will get device power control info:

|      |
|------|
| PW 0 |
| a    |

- a. Current Service id (mode).

### 22.1.6 Reading Email Sending Service

Reading Enter AT+CSTRSTAT="EM 1" will get email set #1 info:

|      |   |      |      |      |      |      |
|------|---|------|------|------|------|------|
| EM 1 | : | TO 1 | CC 0 | BC 5 | SU 3 | BD 1 |
| a    |   | b    | c    | d    | e    | f    |

- a. Service id.
- b. id of TO recipient.
- c. id of CC recipient.
- d. id of BC recipient.
- e. id of email subject.
- f. id of email body.

### 22.1.7 Reading Analog Input Service

Reading Enter AT+CSTRSTAT="AI 1" will get analog input port #1 info:

|      |   |      |        |       |      |      |       |
|------|---|------|--------|-------|------|------|-------|
| AI 1 | : | TP 1 | HL 100 | LL 10 | TH 5 | TR 1 | CV 30 |
| a    |   | b    | c      | d     | e    | f    | g     |

- a. Service id.
- b. Trigger type (1-3).
- c. High limit (mV or mA).
- d. Low limit (mV or mA).
- e. Threshold value (second).
- f. Command String id to be executed if trigger (0 if not to trigger).
- g. Current value (mV or mA).

### 22.1.8 Reading Output Port Service

Reading Enter AT+CSTRSTAT="OP 1" will get output port #1 info:

|      |   |      |
|------|---|------|
| OP 1 | : | SW 1 |
| a    |   | b    |

- a. Service id.
- b. Current state set.



# Chapter 23

## GPS on the M100 3G XT

The M100 3G incorporates gpsOne functionality. User can use GPS AT commands in this chapter to control GPS function.

Before using GPS function please read M100 3G user manual for setting up GPS antenna.

### 23.1 Controlling GPS

#### AT+GPSSTART

**Syntax:** AT+GPSSTART=<state>,<start\_type>,<agps>

**Response:** +GPSSTART: <state>,<start\_type>,<agps>

**Defined Values:**

<state> GPS initialization state to be set:

- "OFF" is released. (default)
- "STOP" is on (initialized) but not running.
- "START" is on and running in normal mode.
- "IDLE" is on but in standby mode.
- "HIBERNATE" is on but in hibernate mode.
- "DEEP" is on but in deep sleep mode.

<start\_type> GPS starting mode:

- "HOT" hot start
- "WARM" warm start
- "COLD" cold start (default)
- "FACTCOLD" factory cold start

<agps> enable AGPS feature:

- "AGPSON" enable AGPS
- "AGPSOFF" disable AGPS (default)

**Example:**

| Command                             | Response   |
|-------------------------------------|--|
| AT+GPSSTART                         | OK<br>Note: start GPS with default settings.         |
| AT+GPSSTART="START","WARM","AGPSON" | OK<br>Note: start GPS with a warm start and AGPS on. |

| Command            | Response  |
|--------------------|---|
| AT+GPSSTART="STOP" | OK<br>Note: stop GPS engine.  |
| AT+GPSSTART="OFF"  | OK<br>Note: turn off the GPS.   |
| AT+GPSSTART="IDLE" | OK<br>Note: turn on the GPS and leave it to idle.   |
| AT+GPSSTART?       | +GPSSTART: "IDLE","WARM","AGPSON"   |
| AT+GPSSTART=?      | +GPSSTART: ("OFF","STOP","START","IDLE",<br>"HIBERNATE","DEEP"),("HOT","WARM","COLD",<br>"FACTCOLD"),("AGPSON","AGPSOFF") |

**Note:**

- If any parameter of the command is omitted, the value of those will remain unchanged.
- State of GPS can be set to another directly, e.g. when the GPS is originally in "OFF" state, the command AT+GPSSTART="IDLE" will first start the GPS and then put it to IDLE state.
- All parameters are saved and will be set on next power up.

### AT+GPSSTOP

To stop the GPS function (put it to initialized mode).

**Syntax:** AT+GPSSTOP

**Response:** OK

**Example:**

| Command    | Response  |
|------------|---|
| AT+GPSSTOP | OK<br>Note: stops GPS, equivalent to AT+GPSSTART="STOP" |

### AT+GPSOFF

To switch off the GPS function.

**Syntax:** AT+GPSOFF

**Response:** OK

**Example:**

| Command   | Response  |
|-----------|---|
| AT+GPSOFF | OK<br>Note: releases GPS, equivalent to AT+GPSSTART="OFF" |

### AT+AGPS

To set the AGPS function and check AGPS download details.

**Syntax:** AT+AGPS=<agps>

**Response:** +AGPS: <agps>[,<ee-period>]

**Defined Values:**

<agps> enable AGPS feature:

- 1 enable AGPS
- 0 disable AGPS (default)

<ee-period> will display valid Timer is running (1) or stop (0).period of EE data, if successfully downloaded. Format is "YY/MM/DD,hh:mm:ss", "YY/MM/DD,hh:mm:ss" time from start to end.

**Example:**

| Command   | Response  |
|-----------|---|
| AT+AGPS=1 | OK<br>Note: enable, equivalent to AT+GPSSTART=,"AGPSON"   |
| AT+AGPS=0 | OK<br>Note: disable, equivalent to AT+GPSSTART=,"AGPSOFF" |
| AT+AGPS?  | +AGPS: 1,"13/05/28,06:00:00","13/06/28,06:00:00"<br>OK    |
| AT+AGPS=? | +AGPS: (0-1)<br>OK  |

**AT+NMEA**

To set the output of NMEA messages to desired com port

**Syntax:** AT+NMEA=<port>

**Response:** +NMEA: <port>

**Defined Values:**

<port> output port for NMEA data stream:

- 2 enable NMEA output on USB COM port.
- 1 enable NMEA output on Serial port.
- 0 disable output (default).

**Example:**

| Command   | Response           |
|-----------|--------------------|
| AT+NMEA=1 | OK                 |
| AT+NMEA?  | +NMEA: 1<br>OK     |
| AT+NMEA=? | +NMEA: (0-2)<br>OK |

**Note:**

- NMEA output is available only when GPS is set to "START" state.
- NMEA output can only be sent to one port at a time.
- If the Serial port or USB COM port is switched to data mode for cellular or TCP data transmission, NMEA messages will not be output.
- USB COM port is not available on the 2G model.

## AT+GPSPOS

To get the last position information.

**Syntax:** AT+GPSPOS

**Response:** +GPSPOS: <fix>,<time>,<date>,<latitude>,<longitude>,<altitude>,<hdop>,<speed>,<course>,<nbsat>

### Defined Values:

- <fix> value of the GPS fix.
- |    |                             |
|----|-----------------------------|
| 0  | Invalid fix                 |
| 1  | 2D fix                      |
| 2  | 3D fix                      |
| -1 | No valid position available |
- <time> Time of fix. Format: hhmmss, ranges of values: hh (hour) 00 to 23, mm (minute) 00 to 59, ss (second) 00 to 59. Example: 225454 means 22:54:54 UTC.
- <date> Date of fix. Format: ddmmyy, ranges of values: dd (day) 01 to 31, mm (month) 01 to 12, yy (year) 2000 to 2099. Example: 191194 means November 19th of 1994.
- <latitude> Format: ddmm.mmmm(N/S), ranges of values: dd (degree) 00 to 90, mm.mmmm (minute) 00,0000 to 59.9999, (N/S) North or South. Example: latitude of the fix -4916.45N means 49 degree 16.45 min North.
- <longitude> Format: dddmm.mmmm(E/W), ranges of values: dd (degree) 00 to 180, mm.mmmm (minute) 00,0000 to 59.9999, (E/W) East or West. Example: longitude of the fix -12.311.12W means 123 degree 11.12 min West.
- <altitude> Format: mmmm.m in meter.
- <hdop> Horizontal dilution of position. Format: xxx.xx.
- <speed> Speed over ground ssss.s, in kilometers per hour.
- <course> dddmm.mmmm in degree, minute, ranges of values: ddd (degree) 000 to 360 mm.mmmm (minute) 00.0000 to 59.9999.
- <nbsat> nn number of satellites in view, range from 1 to 16.

### Example:

| Command   | Response   |
|-----------|--|
| AT+GPSPOS | +GPSPOS: 1, 225454, 192294, 4916.45N, 12311.12W, 111.1, 0.9, 25.5, 180.0, 06<br>OK |
| AT+GPSPOS | +GPSPOS: -1,,,,,,0<br>OK<br>Note: No valid fix                                     |

## AT+GPSINFO

To request some unsolicited indication for GPS and AGPS events (+GPSINFO and +APGS unsolicited messages). See Section 23.2 for details.

**Syntax:** AT+GPSINFO=<mode>

**Response:** +GPSINFO: <mode>

### Defined Values:

<mode>

- 1 enable +GPSINFO and +APGS unsolicited messages.
- 0 disable +GPSINFO and +APGS unsolicited messages. Default value.

### Example:

| Command      | Response   |
|--------------|--|
| AT+GPSINFO=1 | OK<br>Note: enable +GPSINFO and +APGS unsolicited messages.  |
| AT+GPSINFO=0 | OK<br>Note: disable +GPSINFO and +APGS unsolicited messages. |
| AT+GPSINFO?  | +GPSINFO: 0<br>OK  |
| AT+GPSINFO=? | +GPSINFO: (0-1)<br>OK  |

## 23.2 GPS Information unsolicited messages

When +GPSINFO is set to 1, following unsolicited message will come out upon GPS events as described below.

### Syntax:

+GPSINFO:<event>

+AGPS: <event>[,opt]

| +GPSINFO event | Explanation                                   |
|----------------|---|
| 0              | GPS fix has been lost.                        |
| 1              | GPS fix has changed to an estimated position  |
| 2              | GPS fix has changed to 2-Dimensional position |
| 3              | GPS fix has changed to 3-Dimensional position |
| 4              | GPS fix has changed to invalid position       |

| +AGPS event | Explanation   |
|-------------|---|
| 0           | Error during EE download  |
| 4           | EE download started   |
| 5           | EE download stopped (after AT+AGPS=0)   |
| 6           | EE download completed (successful)  |
| 7           | EE download aborted (server access problem)   |
| 8           | EE download data time stamp display, <opt> will show <ee-period>, as detailed in 23.1 |

**Note:**

- The state of GPS can be set from one to the other directly, e.g. when the GPS is originally in "OFF" state, the command AT+GPSSTART="IDLE" will first start the GPS and then put it to IDLE state.
- All parameters are saved and will be set on next restart/power up.
- The AGPS function uses cellular/3G data connectivity. It uses internal stacks to download EE information from dedicated server. To make it work the user should :
  - Setup the correct APN to the first PDP context entry by AT+CGDCONT command.
  - DO NOT use cellular resource at the beginning. The AGPS will take over the cellular to download EE information.
- The AGPS function is disabled when GPS is in "OFF" state. If you need to download EE, data the state of GPS must to set to "STOP" or higher.

### 23.3 Notes on AGPS

AGPS function uses cellular/3G data connectivity. It uses internal stacks to download EE information from dedicated server.

#### AGPS requirement and setup

To perform AGPS function do the following:

1. Power on the modem with a valid SIM card and data service enabled.
2. Enter APN by using command AT+CGDCONT.
3. Do NOT use any SmartPack function which needs data service.
4. Switch on the GPS by AT+GPSSTART command.
5. Enter AT+AGPS=1.

Once AGPS download is successful you can use command AT+AGPS? to check the <ee-period> (see 23.1).

#### Example of AGPS operation

```
AT+CGDCONT=1,"IP","INTERNET"  
OK  
AT+GPSSTART  
OK  
AT+GPSINFO=1  
OK  
AT+AGPS=1  
OK  
+AGPS: 4  
+AGPS: 6  
+AGPS: 8,"13/05/29,03:00:00","13/06/05,03:00:00"
```

## 23.4 Command string GPS service

The GPS service is used to trigger a Command String when there is a GPS event. Make sure the GPS functionality is switch on.

There are three GPS events:

| Id | event                               |
|----|-------------------------------------|
| 0  | From a 2D fix or 3D fix to a no fix |
| 1  | From a no fix to a 2D fix           |
| 2  | From a no fix or 2D fix to 3D fix   |

### 23.4.1 Socket Communication Service Command String Syntax and explanation

| 1st field<br>Service<br>type | 2nd field<br>Service<br>id | 3rd field<br>Operation<br>type | 4th field<br>Operation argument | Explanation                                       |
|------------------------------|----------------------------|--------------------------------|---------------------------------|---|
| GP                           | (0 to 2)                   | TR                             | (1-50)<br>0                     | Set Command String to be run, 0 to cancel setting |

**Example:** When a 2D or 3D fix trigger Command String #10

```
GP_1_TR_10_GP_2_TR_10
```

Invalid Service name or Id will be ignored.

### 23.4.2 Reading GPS service status

Enter AT+CSTRSTAT="GP 1" will get GPS service #1 info:

|          |   |          |          |          |
|----------|---|----------|----------|----------|
| GP 1     | : | SW 0     | TH 1     | TR 0     |
| <b>a</b> |   | <b>b</b> | <b>c</b> | <b>d</b> |

**a.** Service id.

**b.** GPS state:

- 0 OFF,
- 1 STOP,
- 2 START,
- 3 IDLE,
- 4 HIBERNATE,
- 5 DEEP.

**c.** GPS value:

- 0 no fix,
- 1 2D fix,
- 2 3D fix.

**d.** Command String id to be executed if trigger (0 if not to trigger).

### 23.4.3 GPS info for EM, SC and SM service

In EM, SC and SM service the message content may contain %GP variable for GPS information. The variable format is "%GPn" where:

**Variable(n) Explanation**

|   |   |
|---|---|
| 0 | UTC Date in ddmmyy format (empty when no fix)         |
| 1 | UTC Time in hhmmss format (empty when no fix)         |
| 2 | Latitude in ddmm.mmmmN/S format (empty when no fix)   |
| 3 | Longitude in dddmm.mmmmE/W format (empty when no fix) |
| 4 | Altitude in m.mm format (empty when no fix)           |
| 5 | Speed in m.mm format (zero when no fix)               |
| 6 | Direction in dddmm.mmm format (zero when no fix)      |

**Example:** To send a SMS with date, time, Latitude and Longitude:

```
SM_1_1_SN_DATE=%GP0_TIME=%GP1_LAT=%GP2_LON=%GP3
```

# Chapter 24

## Questions and answers

### AutoTCP/UDP

- Q.** Can I specify <server> by URL (e.g. xxxxxxx.com) rather than IP address?
- A.** Yes, but only if your cellular network have proper DNS service. You cannot specify your own DNS server
- Q.** If I enabled AutoTCP or AutoUDP, how can I stop it?
- A.** You need to enter the command AT+AUTOTCP=0 or AUTOUDP=0 by either 1: within 20 seconds after power up, or 2: during reconnection (serial port back to command mode), or 3: by SMS (see Chapter 6)

### AT command driven TCP/UDP connection

- Q.** Why I see three "OK" coming after entering AT+IPCONNECT=1,1 command?
- A.** The Software Tools program is issuing internal AT command for cellular setup, so extra "OK" responses will be seen.
- Q.** After the TCP/UDP connection is stopped I wan to enter AT+OTCP or AT+OUDP to reconnect but I get message "+CME ERROR: 3". Why?
- A.** After TCP/UDP socket connection the cellular connection session will also be disconnected. So please enter AT+IPCONNECT=1,1 to reconnect cellular first.

### Remote AT command by SMS

- Q.** Can I send any AT command by SMS to control other features described in this document?
- A.** Yes. Please refer to Chapter 19.

### Command String Feature

- Q.** Are the status of Services settings and status will be saved when power is cut?
- A.** All Services status will be saved into non-volatile memory, so e.g. like Countdown timer will resume counting when power recover. But all Output Ports will be set to logic 0 when power up.
- Q.** Can I check the status out Output Ports?
- A.** Yes. You can use AT+CSTRSTAT command to check
- Q.** What should be noted with the execution priority of concatenated Command String?
- A.** During executing concatenated Command String, if the 1st part of the CS leading to another no. of the CS to be triggered, then the triggered CS will be executed first, e.g. "CT 1 IN 1 CT 1 DE 1"  
If the first CS (counter #1 increment by 1) will let the Counter#1 to trigger CS #2, then CS #2 will be executed BEFORE executing "CT 1 DE 1"



## Chapter 25

# Example of modem software setup and operation

### To setup automatic TCP connection from modem to server

SIM card APN is "internet"; Server IP address is 61.167.60.1; Server port is 23.

- Enter APN information:  
`AT+IPGPRS=1,"internet"`
- Setup TCP server parameters:  
`AT+IPCTP□=□23,"C","61.167.60.1"`
- Enable automatic TCP connection:  
`AT+AUTOTCP=1`
- TCP connection will start after 20 seconds.

### To setup automatic TCP connection from server to modem

SIM card APN is "internet"; Connection IP format is 255.255.255.255; Connection port is 23.

- Enter APN information:  
`AT+IPGPRS=1,"internet"`
- Setup TCP server parameters:  
`AT+IPCTP□=□23,"S","255.255.255.255"`
- Enable automatic TCP connection:  
`AT+AUTOTCP=1`
- TCP socket on modem will start after 20 seconds.

### To setup AT command driven TCP connection

SIM card APN is "internet"; Server IP address is 61.167.60.1; Server port is 23.

- Enter APN information:  
`AT+IPGPRS=1,"internet"`

- Setup TCP server parameters:  
`AT+IPCTP_□=□23,"C", "61.167.60.1"`
- Enable "DLE" character to close connection:  
`AT+DLEMODE=1`
- Attach to cellular:  
`AT+CGATT=1`
- Connect to cellular:  
`AT+IPCONNECT=1,1`
- Open TCP connection:  
`AT+OTCP  
CONNECT_□115200`
- TCP connection is now available and can be close by the "DLE" character.

## To setup periodic ping

SIM card APN is "internet"; Ping IP address is 8.8.8.8;

- Enter APN information:  
`AT+IPGPRS=1,"internet"`
- Configure IPPING with 3 retry, 2 seconds delay between retries, and a maximum timeout of 15 seconds:  
`AT+IPPING_□=□2,"61.167.60.1",□3,2,15`
- Perform a ping every 1800 seconds, if ping fail disconnect cellular:  
`AT+IPOPT=4,1800,1`

## To setup TCP Terminal and Dynamic DNS automatic update

SIM card APN is "internet"; Dynamic DNS provider is no-ip; TCP Terminal port is 1024; You will need your own hostname, login and password.

- Enter APN information:  
`AT+IPGPRS=1,"internet"`
- Set Dynamic DNS server:  
`AT+IPDDNSSERV="dynupdate.no-ip.com",80`
- Set no-ip account details:  
`AT+IPDDNSACCT="mymodem.ddns.net","mylogin","mypsswd"`
- Enable automatic Dynamic DNS update:  
`AT+IPDDNSUPD=1`

- Specify TCP Terminal port, password, with a 30 seconds timeout:

```
AT+TCPTERM=2, "mypsswd", 1024, 30
```

- Enable TCP Terminal:

```
AT+TCPTERM=1
```

## To perform a remote application update using remote SMS command

Be sure to have enabled the remote SMS access (SMSAT) on modem first.

FTP address is 61.93.240.149, directory is "modem", file name is "update092i.dwl", login is maestro, password is dota.

- Send SMS to the modem to specify APN information:

```
000000AT+IPGPRS=1, internet
```

Modem will send SMS back with: OK

- Send SMS to the modem to setup the FTP server access information:

```
000000AT+IPFTP=21, I, A, 61.93.240.149, maestro, dota
```

Modem will send SMS back with: OK

- Send SMS to launch new application download and update:

```
000000AT+FTPDATA=update092i.dwl, modem, 1
```

Modem will send SMS back with:

```
+ADINSTALL: 2
```

```
modem_092i_0ATS221_2687_22_MAY_11_15:02:18
```

## Input port signal to send SMS w/ Command String

To set if input port #1 has a low-to-high signal and last for 0.5 seconds, then send a SMS to phone book number 1 with input pins status message. Services used: IP#1.

- Set CS2: send SMS to phone #1 with input port #1 status message.

```
AT+CSTRSET=0, 2, "SM_1_SN_PIN_1_HIGH_IP_STATUS:_%IP"
```

- Input port #1 low-to-high, 50mS threshold, trigger CS2.

```
AT+CSTR="IP_1_DR_0_IP_1_TH_5_IP_1_TR_2"
```

## Input port signal to send e-mail w/ Command String

To set if input port #2 has a low-to-high signal and last for 0.5 seconds, then send an already configured e-mail with input pins status message. Services used: EM#1, IP#2.

- Enter APN information:

```
AT+IPGPRS=1, "internet"
```

- Setup SMTP server:  
AT+IPSMTP=25,0,"smtp.network.com"
- Setup sender address:  
AT+EMADDR=0,0,"me@network.com"
- Setup recipient address:  
AT+EMADDR=0,1,to\_1@network.com,□to\_2@network.com"
- Setup cc recipients addresses:  
AT+EMADDR=0,2,"cc\_1@network.com,□cc\_2@network.com"
- Setup bcc recipients addresses:  
AT+EMADDR=0,3,"bcc\_1@network.com,□bcc\_2@network.com"
- Setup e-mail subject:  
AT+EMSUBJ=0,1,"Email\_□subj\_□#1"
- Set EM#1 using TO#1, CC#2, BCC#3, Subject#1:  
AT+CSTR="EM\_1\_□TO\_1\_□EM\_1\_□CC\_2\_□EM\_1\_□BC\_3\_□EM\_1\_□SU\_1"
- Set CS3: Send out email using EM#1 settings with input port #2 status in message content.  
AT+CSTRSET=0,3,"EM\_1\_□SN\_□PIN\_2\_HIGH\_IP\_STATUS:\_%IP"
- Set input port #2 low-to-high, 50mS threshold, trigger CS  
AT+CSTR="IP\_1\_□DR\_□0\_□IP\_1\_□TH\_5\_□IP\_1\_□TR\_3"

### Analog input alarm by SMS w/ Command String

To set if analog input port #1 value exceed 1V and last for 2 seconds, then send a SMS to phone book number 1 with an alert message. Service used: AI #1, SM#1.

- Set CS2 : send SMS to phone #1 with content "AI\_1\_over\_1000mV"  
AT+CSTRSET=0,2,"SM\_1\_□SN\_□AI\_1\_over\_1000mV"
- Set AI#1 exceed HL trigger, HL=1000mV, 50mS threshold, trigger CS2  
AT+CSTR="AI\_1\_□TP\_1\_□AI\_1\_□HL\_1000\_□AI\_1\_□TH\_2\_□AI\_1\_□TR\_2"

### GPS reporting to server via TCP socket w/ Command String

Use case is to report GPS information to a TCP socket on server, every time there is a fix send every minute, every time there is a fix loss send every hour, from boot send every hour. The fix trigger can be easily change to match a input change or other event.

- Setup APN  
AT+IPGPRS=1,"internet"

- Set server connection on a TCP socket

```
AT+SCHOST=0,1,"myserver.com",myport,2,10,0
```

- Start GPS

```
AT+GPSSTART="START","COLD","AGPSOFF"
```

- Setup GPS fix 2D and 3D to trigger CS#2

```
AT+CSTR="GP_0_TR_3_GP_1_TR_2_GP_2_TR_2"
```

- 60s message when fix ON: CS#2 send GPS message to server and stop timer 3, and set timer 2 to 60sec then trigger back CS#2

```
AT+CSTRSET=0,2,"SC_1_SN_DATE_%GPO__TIME_%GP1__LAT_%GP2__LON_%GP3__ALT_%GP4__SPEED_%GP5_TM_3_
SW_0_TM_2_ST_60_TM_2_SW_1_TM_2_TR_2"
```

- 1h message when fix OFF: CS#3 send GPS message to server and stop timer 2, and set timer 3 to 3600sec then trigger back CS#3

```
AT+CSTRSET=0,3,"SC_1_SN_DATE_%GPO__TIME_%GP1__LAT_%GP2__LON_%GP3__ALT_%GP4__SPEED_%GP5_TM_2_
SW_0_TM_3_ST_3600_TM_3_SW_1_TM_3_TR_3"
```

- 1h message from boot (CS#80): send GPS message to server and set timer 1 to 3600sec then trigger back CS#80

```
AT+CSTRSET=0,80,"SC_1_SN_DATE_%GPO__TIME_%GP1__LAT_%GP2__LON_%GP3__ALT_%GP4__SPEED_%GP5_TM_1_
ST_3600_TM_1_SW_1_TM_1_TR_80"
```



# Chapter 26

## Command string - Quick reference

| ALARM "AL"                |                |   |
|---------------------------|----------------|---|
| Service Id                | Operation Type | Argument and Explanation  |
| 1 to 5                    | ST             | yy/mm/dd, hh:mm:ss (Date time, 0 to cancel)   |
|                           | TR             | 0 to 50 (CS to trigger, 0 to cancel)  |
| COUNTER "CT"              |                |   |
| Service Id                | Operation Type | Argument and Explanation  |
| 1 to 5                    | DE             | 1 to 255 (Decrement)  |
|                           | IN             | 1 to 255 (Increment)  |
|                           | RS             | 0 (Reset)   |
|                           | ST             | -32768 to 32768 (value to trigger)  |
|                           | TR             | 0 to 50 (CS to trigger, 0 to cancel)  |
| COUNTDOWN TIMER "TM"      |                |   |
| Service Id                | Operation Type | Argument and Explanation  |
| 1 to 10                   | ST             | 1 to 2147483647 (Timer initial value)   |
|                           | SW             | 0 to 1 (stop or start timer)  |
|                           | TR             | 1 to 50 (CS to trigger, 0 to cancel)  |
| INPUT PORT "IP"           |                |   |
| Service Id                | Operation Type | Argument and Explanation  |
| 1                         | DR             | 0 to 1  |
|                           | TH             | 1 to 255 (Duration state to trigger unit in 0.1s)   |
|                           | TR             | 1 to 50 (CS to trigger, 0 to cancel)  |
| SMS "SM"                  |                |   |
| Service Id                | Operation Type | Argument and Explanation  |
| 1 to 10                   | SN             | (SMS CONTENT)<br>(variable : %CTn counter value<br>%IP input port value<br>%TMn countdown timer value)              |
| EMAIL "EM"                |                |   |
| Service Id                | Operation Type | Argument and Explanation  |
| 1 to 10                   | TO             | 0-50 (recipient id, 0 to cancel)  |
|                           | CC             | 0-50 (cc recipient id, 0 to cancel)   |
|                           | BCC            | 0-50 (bcc recipient id, 0 to cancel)  |
|                           | SU             | 0-10 (subject id, 0 to cancel)  |
|                           | BD             | 0-3 (body/content id, 0 to cancel)  |
|                           | SN             | (additional email content)<br>(variable : %CTn counter value<br>%IP input port value<br>%TMn countdown timer value) |
| DEVICE POWER CONTROL "PW" |                |   |
| Service Id                | Operation Type | Argument and Explanation  |
| 0 to 15                   | 1 (dummy)      | 1 (dummy)   |

| ANALOG INPUT "AI" |                |   |
|-------------------|----------------|---|
| Service Id        | Operation Type | Argument and Explanation                                      |
| 1 to 4            | TP             | 1 to 3 (Trigger type: higher than HL, lower than LL, or both) |
|                   | TH             | 1 to 255 (Threshold TP trigger unit in second)                |
|                   | HL             | -6000 to 6000 (High limit unit in mV or mA)                   |
|                   | LL             | -6000 to 6000 (Low limit unit in mV or mA)                    |
|                   | TR             | 0 to 50 (CS to trigger, 0 to cancel)                          |
| GPS "GP"          |                |   |
| Service Id        | Operation Type | Argument and Explanation                                      |
| 0 to 2            | TR             | 1 to 50 (CS to trigger, 0 to cancel)                          |
| OUTPUT PORT "OP"  |                |   |
| Service Id        | Operation Type | Argument and Explanation                                      |
| 0 to 2            | SW             | 0 to 1 (Current state set)                                    |

# Chapter 27

## Known issues

The modem SmartPack will affect certain other AT commands operation. Please note.

### Mutually exclusive TCP/UDP functions

Following functions are exclusive to each other, i.e. if either is enabled others could not be then:

- AT+AUTOTCP=1
- AT+AUTOUDP=1
- AT+OTCP
- AT+OUDP

### Sending commands over SMS

You can use the remote AT command by SMS feature to send modem Software AT commands mentioned in this document except the followings:

- AT+OTCP
- AT+OUDP
- AT+IPCONNECT
- AT+EMBODY
- AT+SCMESS
- AT+AUTOPIN
- AT+SPRESET
- AT+SPMODE



## Chapter 28

# SmartPack change log

### Version 097g, on firmware R7.50

- Added SPMODE command to switch from SmartPack to WipSoft
- Added SPRESET command to reset all SmartPack settings to default. Can't be entered remotely.
- Added IPDEBUG command to display TCP/IP stack debug message.
- Fixed signal LED that sometimes won't flash even when network registration is OK
- Fixed Command String Input pin 2 triggering issue
- Fixed remote AutoTCP/UDP data not forwarded to serial port if socket is closed by remote peer within a very short period

### Version 2.2, on firmware R7.52.2 and R7.53.1

The version numbering has been updated to follow more clear versioning.

- Added MODESELECT, MODBUSCFG command to enable different serial mode and modbus converter on the M100.
- Added SERIAL command to modify the serial port settings from USB port.
- Added a flag in SMSAT to disable SMS response.
- Added IPOPT option 5 and 6.
- Fixed IPCONNECT ERROR response with common AT command ERROR codes.
- Fixed CT service in command string.
- Fixed IPPING response.
- Fixed GP service in command string.
- Fixed IP service in command string.
- Fixed AL service in command string.
- Fixed OTCP on M100CDMAplus, on both serial and USB.
- Fixed IPSMTP command parameters.
- Fixed SMS text format (can send non capitalized text) in command string.
- Fixed SPRESET to erase every configuration.
- Improved IPTCP as a server socket connection.



# Chapter 29

## Related documents

### 29.1 Related documents

Following documents are available on Maestro Wireless Solutions website: <http://update.maestro-wireless.com/m100>.

- How to upgrade a modem in five easy steps
- Application Note - Automatic connections

M100 2G:

- Quick Start Guide
- AT commands guide for Open AT Firmware on SL6087

M100 3G:

- Quick Start Guide
- AT commands guide for Open AT Firmware on SL808xT
- Extended AT command list
- Location AT command list

M100 CDMAplus:

- Quick Start Guide
- AT commands guide for Open AT Firmware on SL3010T
- Extended AT command list
- Location AT command list

### 29.2 Related software

Following software are available on Maestro Wireless Solutions website: <http://update.maestro-wireless.com/m100>.

- Maestro Configuration Software
- M100 USB Drivers
- Latest firmware files, and latest SmartPack application